

EN – English



Installation and operating manual

METPOINT[®] OCV compact

Measuring system for recording
vapour and gas-containing
hydrocarbons in compressed air



Manufacturer: **BEKO TECHNOLOGIES GMBH**
Im Taubental 7
D-41468 Neuss
Tel. +49 2131 9880
www.beko-technologies.com

Issue date: 04/2020

Version: 00_01

Document-No.: 10-249

Table of contents

Table of contents.....	3
1 General	5
1.1 Pictograms and symbols	6
1.2 Signal words according to ISO 3864 and ANSI Z.535	7
1.3 General safety instructions	8
1.4 Residual risk	12
1.5 Intended use	13
1.6 Legal warranty and liability for defects	14
2 Transport and storage.....	15
3 Product information and device description	17
3.1 Type plate	17
3.2 Product view	18
3.3 Functional description for METPOINT® OCV compact	18
3.3.1 Measurement value formation	20
3.4 Operating and display elements	21
3.4.1 LED-Display	21
3.4.2 Designation and functions of the display buttons	21
3.4.3 Operating messages	22
3.5 Parts and components	23
3.6 Pressure reducer for compressed air inlet	25
3.7 Dimensions	26
3.8 Technical data METPOINT® OCV compact	27
3.9 Applied EU Directives and harmonised standards	29
4 Assembly.....	30
4.1 Safety instructions	30
4.2 Fundamental requirements for the installation	33
4.2.1 Compressed air treatment with a BEKOKAT® catalytic converter	35
4.2.2 Compressed air treatment with activated carbon adsorber	36
4.2.3 Compressed air treatment with oil-free compressing compressor	37
4.3 Wall mounting	38
4.4 Device connections	39
4.5 Assembly of compressed air connection	40
4.5.1 Sampling	40
4.5.2 Connection to the compressed air system	42
4.6 Electrical installation	45
4.6.1 Safety instructions	45
4.6.2 Electrical connections	48
4.6.3 Power supply and fuses	49
4.6.4 Terminals for electrical connections	50
4.6.5 Connection terminals for the potential-free contacts	54

5 Commissioning.....	57
5.1 Initial switching on	58
5.2 Setting the alarm limiting values for residual oil limit value	63
5.3 Setting the analogue output for the residual oil measurement value	68
5.4 Digital interface RS-485 MODBUS RTU	73
6 Troubleshooting and remedying malfunctions	81
6.1 Measures in emergencies	81
6.2 Operating messages	82
6.2.1 Exceeding the set alarm limit value	85
6.2.2 Exceeding and undershooting the PURIFICATOR temperature	85
7 Maintenance and repair works	86
7.1 Advance and subsequent preparation for maintenance works	87
7.1.1 Prevention of electrostatic discharge (ESD)	88
7.2 Retaining the protection class with a housing	89
7.3 Maintenance schedule	90
7.4 Calibration intervals	91
7.5 Inspect the pressure regulator for the compressed air inlet	92
7.6 Electrical connection cable defective	93
7.7 Replacing the fuses	94
7.8 Cleaning and decontamination	96
7.9 List of spare parts	97
8 Decommissioning and Disposal	98
8.1 Decommissioning	98
8.2 Disposal	98
9 EU Declaration of Conformity.....	99
10 Service addresses	102

1 General

The installation and operating instructions for the **METPOINT® OCV compact** measuring device described in this document were developed for the detection of vapours and gaseous hydrocarbons in compressed air and is designed and manufactured according to the latest findings and recent knowledge.

All components are subjected to a continuous quality control throughout the manufacturing process according to the criteria of our quality management system.

BEKO TECHNOLOGIES GMBH is certified according to **ISO 9001: 2008**.

This installation and operating manual for the **METPOINT® OCV compact** measuring device must be carefully read and completely understood by the responsible personnel before starting all work (installation, commissioning and maintenance).

A prerequisite for safe handling and trouble-free operation of this measuring device is compliance with all stated safety instructions and handling instructions.

The operating instructions are an integral part of the measuring device and must always be available at the installation location of the **METPOINT® OCV compact**.

The local accident prevention regulations applicable to the product and the general safety regulations must be complied with.

This documentation, including all its parts, is protected by copyright. Any use or modification outside the strict limits of the copyright law is prohibited and punishable without the consent of **BEKO TECHNOLOGIES GmbH**. This applies, in particular, to duplication, reproduction, translation, microfilming and storage and processing in electronic systems.

1.1 Pictograms and symbols

The safety instructions in these operating instructions are intended to prevent hazards. They are located in the operating manual before an action / work / activity is described which can create a hazard.



General hazard symbols (danger, warning, caution).



Warning about electric voltage.



Warning about hot surfaces.



General instructions.



Adhere to the installation and operating instructions.



Wear eye protection



Wear safety shoes.



Wear protective clothing.



Never use water for fire fighting.



Environmentally friendly material.





The packaging material is recyclable. Dispose of it according to the applicable statutory regulations.

1.2 Signal words according to ISO 3864 and ANSI Z.535

DANGER!	Imminent danger Consequences of non-compliance: serious or even fatal injury
WARNING!	Potential danger Consequences of non-compliance: possibly serious or even fatal injury
CAUTION	Imminent danger Consequences of non-compliance: injury and/or damage to property
NOTE	Additional notes, tips and hints Consequences of non-compliance: Disadvantages during operation and maintenance.


1.3 General safety instructions


NOTE	Installation and operating manual
	<ul style="list-style-type: none"> • Before reading, always check whether this installation and operating manual refers to your device type. This document contains important information and instructions for the safe operation of the measuring device. • Before carrying out any work, all specialist technical personnel¹⁾ must therefore have read the installation and operating manual. • A copy of these operating instructions must be kept near the installation location where it is accessible all times. • In addition to the instructions in this installation and operating manual, always comply with the relevant national and statutory regulations for machine operation accident prevention and safety for the respective application. This also applies to the use of accessories and spare parts.


DANGER!	Insufficient qualification
	<ul style="list-style-type: none"> • Incorrect operation with the measuring device can result in serious injury or damage to property. All the activities and tasks described in this operating manual must only be executed by skilled technical personnel. • This installation and operating manual for the METPOINT® OCV compact measuring device must be carefully read and completely understood by the responsible personnel before starting all work (installation, commissioning and maintenance).


1) Specialist technical personnel


Specialist technical personnel are people who, due to their professional qualification and knowledge in the field of measuring, control and pneumatic technology, and their knowledge of the applicable statutory regulations, guidelines and standards are in a position to independently foresee potential dangers in relation to the use of the device and who are qualified to perform the tasks described in this manual. Special operating conditions (e.g. aggressive media) require additional knowledge.


DANGER!	Electric power
	<p>Touchable conductive parts can lead to dangerous voltages / mains voltage during installation and maintenance or in case of defects. Hazard resulting in of serious or even fatal injury from electric shock when coming into contact with uninsulated parts or mains voltage.</p> <ul style="list-style-type: none"> • All works on the electrical parts of the measuring system may only be executed by appropriately trained skilled personnel. • The measuring device must not be operated when the power supply cables indicate damage or the housing parts have been damaged or removed. • The local valid legal regulations and provisions must be complied with without exception. • Observe the electrical data provided on the rating plate. • Work on the electrical connections may only be executed when the power supply is switched off. The device must be protected against unintentional reconnection or switching on again. • Only utilise components for the electrical installation which have a current approval and are labelled with a CE-Identification Marking. • The wire ends to be connected to the control unit must be equipped with wire-end ferrules. • All electrical connections must be inspected before commissioning and at regular intervals.


WARNING!	Operation of the system outside limit range
	<p>If the specified limiting values are undershot and/or exceeded, then there will be a danger for people or materials and device malfunctions and operation malfunctions could occur as well as incorrect measuring results.</p> <ul style="list-style-type: none"> • The METPOINT® OCV compact measuring device may only be used in accordance with its intended use and within the permitted limiting values stated on the rating plate as well as in the technical data. • Always adhere to the permitted storage and transport conditions.

WARNING!	Hot surface
	<ul style="list-style-type: none"> • Risk of injury to people property damage - risk of fire! • The PURIFICATOR reference gas generation unit reaches surface temperatures above +60°C during operation. • Always allow the METPOINT® OCV compact to cool down before executing any work! • Secure and mark the accessible places.

DANGER!	Fire safety
	<p>Any fire developing on the measuring device will result in the highest possible danger levels for people and materials.</p> <ul style="list-style-type: none"> • Safety devices that prevent excessive pressure build-up as a consequence of a fire are not included in the standard scope of delivery. • If there are potential ignition sources at the place of installation of the plant, the operator must take suitable safety measures to ensure that the permissible operating parameters of the plant are not exceeded.

DANGER!	Excessive pressure / temperature
	<ul style="list-style-type: none"> • Suitable measures must be implemented to ensure that the permissible operating pressure and operating temperature are not exceeded in system components. • It is the sole responsibility of the system owner or plant operator to protect the plant against excessive pressure and temperature. • It must be ensured that the pressure generating compressor and the compressed air system are secured and safe. • Suitable measures must be implemented to ensure that the permissible operating temperature is not inadvertently exceeded by ambient conditions at the installation location.


DANGER!	Escaping compressed gas
	<p>Any contact with escaping compressed gas or not secured system parts will create danger of serious injuries or death.</p> <ul style="list-style-type: none"> • Installation and maintenance works must only be executed in a depressurised status. • Only utilise pressure-resistant installation material and suitable tools which are in perfect condition. • Always inspect and re-tighten all plant and system parts before pressurising before pressurising • Open valves slowly to prevent pressure blow in operating status. • The compressed air lines must be permanently installed. • Prevent that people or objects can be hit by escaping compressed gas. • Prevent vibrations, oscillations and impact from being transferred to the measuring device. • Perform a leakage test.

CAUTION	Malfunctions on the METPOINT® OCV compact
	<ul style="list-style-type: none"> • Incorrect installation and insufficient maintenance can lead to malfunctions on the measuring device which will impair the display functions and could lead to incorrect interpretation. • Observe the applicable national regulations, provisions and safety regulations during installation and operation.

1.4 Residual risk

The **METPOINT® OCV compact** measuring system corresponds to the current state of safety technology. Nevertheless, certain residual risks remain:

- Hazards caused by incorrect transport and storage.
- Hazards caused by electrical voltage when using incorrect electrical connection cables or touching live parts with the system open.
- Hazards caused by improper commissioning and/or assembly personnel who are not trained.
- Hazards caused by ignoring the safety instructions.
- Hazards caused by circumventing or disarming the safety equipment or devices.
- Hazards caused by operating outside permissible pressure and temperature limits.
- Hazards caused by operating with a medium other than the approved one.
- The safety labels and/or safety instructions in this operating manual indicate additional residual risks. Always adhere to all safety instructions.


DANGER!	Incorrect installation location
	<p>The METPOINT® OCV compact must not be installed in explosion-hazardous areas.</p>

1.5 Intended use

The **METPOINT® OCV compact** has been specifically developed for the measuring of hydrocarbon vapours and gases in compressed air. The compressed air must be free of aggressive, corrosive, caustic, toxic and inflammable components.

The residual oil content will be displayed in **mg / Standard m³**. The standard m³ relates to 1.0 bar absolute, +20°C, 0% relative humidity according to ISO 8573-1.

The intended use of the **METPOINT® OCV compact** requires that the instructions in the installation and operating instructions are fully implemented and that the measuring device is only used by **qualified personnel** according to the technical data.

CAUTION	Danger caused by incorrect use
	<p>Operate METPOINT® OCV compact only for the intended purpose and within the limit range specified in the technical data. Do not operate the unit with any media (fluids, gas/vapour mixtures) other than those listed above. Any other use of the device, which exceeds the intended use, is hereby deemed to be improper and can cause a hazard for the safety of people and the environment.</p> <ul style="list-style-type: none"> • The METPOINT® OCV compact may only be pressurised with compressed air medium. • The device is not suitable for operation in explosion hazard areas as well as in areas with aggressive atmospheres. • The measuring device must not be exposed to direct sunlight or heat radiation.


1.6 Legal warranty and liability for defects


All liability claims will be invalidated as soon as the **METPOINT® OCV compact** is not utilised in accordance with its intended use or is operated outside the limits specified in the technical data. The following particularly apply:


- Technically incorrect installation, incorrect commissioning, incorrect maintenance or incorrect operation
- Operation with defective components
- Non-compliance with the instructions in this manual, in particular the safety instructions
- Execution of constructive interventions or modifications on the device
- Non-compliance with the prescribed maintenance intervals
- Utilising non-original or unapproved spare parts for repair and maintenance works.


2 Transport and storage

The **METPOINT® OCV compact** is packaged as transport secure and delivered. Despite our best efforts regarding packaging etc., the device might be damaged during transport. Upon receipt, you must therefore remove all packaging material and inspect the **METPOINT® OCV compact** for visible damage. Any damages must be immediately notified to the transport company and **BEKO TECHNOLOGIES GMBH** or one of their agents.


CAUTION	Damage caused during transport or storage
	<p>Incorrect transport or storage can cause damage to the device.</p> <ul style="list-style-type: none"> • The METPOINT® OVC compact must only be transported or stored by authorised and trained, skilled personnel. • Observe the general safety and accident prevention regulations when transporting the METPOINT® OCV compact. • Only use suitable and technically faultless lifting and hoisting tools with sufficient lifting capacity for transport. • The system must be handled with due care. • After opening the transport packaging, inspect the system for possible damage. • Never expose the device to continuous, direct sunlight or heat radiation.



CAUTION	Use of protective clothing
	<p>To prevent injury to hands and feet when transporting the METPOINT® OCV compact, personnel must wear suitable personal protective equipment and safety footwear!</p>

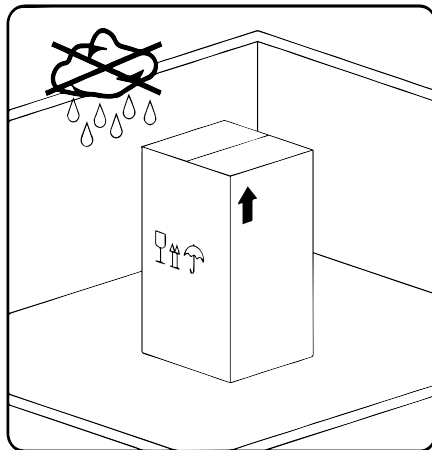CAUTION	Danger caused by damaged components
	Never utilise any damaged components. Defective components could impair the operational safety or result in incorrect measurements and cause subsequent damage.



- The **METPOINT® OCV compact** must be stored in the original packaging in a closed, dry as well as frost-free room.
- Ensure that the ambient conditions do not undershoot and/or exceed the details or information on the type plate.
- Always take suitable measures to protect the **METPOINT® OCV compact** against the elements even in a packaged condition.
- Secure the **METPOINT® OCV compact** against falling over and protect it against impacts and vibrations.





NOTE	Additional information
	Always retain the installation and operation manual together with the product. Please contact the manufacturer for storage times exceeding 6 months.


NOTE	Recycling packaging material
 	The packaging material is recyclable. Dispose of the packaging material according to the applicable statutory regulations.

3 Product information and device description

3.1 Type plate

The type plate is attached to the measuring device housing. It contains all relevant technical data about the **METPOINT® OCV compact** measuring system. Please have these details to hand when contacting the manufacturer and/or supplier.

<p>English explanation</p> <p>Product Name</p> <p>Year of construction</p> <p>Model</p> <p>Serial No.</p> <p>Supply voltage</p> <p>Frequency range</p> <p>Maximum power input</p> <p>Maximum current input</p> <p>Degree of protection</p> <p>Ambient temperature</p> <p>Weight</p> <p>Measuring gas system</p> <p>Measuring gas</p> <p>Working pressure</p> <p>Operating temperature</p>	<div style="display: flex; align-items: center;">  <div> <p>BEKO TECHNOLOGIES GMBH Im Taubental 7 D-41468 Neuss, GERMANY Phone: +49 2131 988-0 www.beko-technologies.com</p> </div> </div> <p>Product Name METPOINT® OCV compact</p> <p>Year of Construction 10-2015</p> <p>Model: 4039709</p> <p>Serial No. 13676522</p> <p>Supply Voltage 100 ... 240 VAC/ 1Ph. / PE</p> <p>Frequency Range 50 ... 60 Hz</p> <p>Maximum Power Input 115 VA @ 230 VAC 104 VA @ 115 VAC</p> <p>Maximum Current Input 0.5 A @ 230 VAC 0.9 A @ 115 VAC</p> <p>Degree of Protection IP54</p> <p>Ambient Temperature +5 ... +45 °C</p> <p>Weight 16.3 kg</p> <p>Measuring gas system</p> <p>Measuring Gas Compressed Air</p> <p>Working Pressure 3 ... 16 bar(g)</p> <p>Operating temperature +5 ... +50 °C</p> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 20px;">    </div>
---	--

NOTE	Handling the rating plate
	Never damage, remove or make the type plate illegible. For more information on the symbols used, refer to "Pictograms and Symbols".

3.2 Product view




3.3 Functional description for METPOINT® OCV compact

The purity of the compressed air with respect to the residual oil content is defined in the international standard **ISO 8573-1**. The **METPOINT® OCV compact** has been developed for the detection of vapours and gaseous hydrocarbons in compressed air free from aggressive, corrosive, toxic and inflammable components. The sensor of the **METPOINT® OCV compact** works with the tried and tested and reliable principle of photo-ionisation with a photo-ionisation detector (**PID Sensor**).

The measuring principle of a **PID** is based on the ionisation of the gas molecule via **UV radiation** and recording the thereby resulting ion flow. The normal integral parts of the compressed air (oxygen, nitrogen, carbon dioxide, argon, water, etc.) are not ionised by the UV lamp. Hydrocarbons, on the other hand, are reliably ionised. The strength of the ion current is directly proportional to the concentration of the ionised molecules. The electrical signal is measured, electronically amplified and displayed as the sum of the measured substances in the display.

The measuring gas (compressed air) is routed to the PID sensor directly or via the reference gas generation unit by the so-called **PURIFICATOR**. In this way, the sensor will be cleaned at regular intervals and a new zero point is determined. The new zero point is then updated in the processor and acquired for the generation of measured values.

The reference gas generation is executed in a catalytic converter reactor patented by BEKO TECHNOLOGIES.

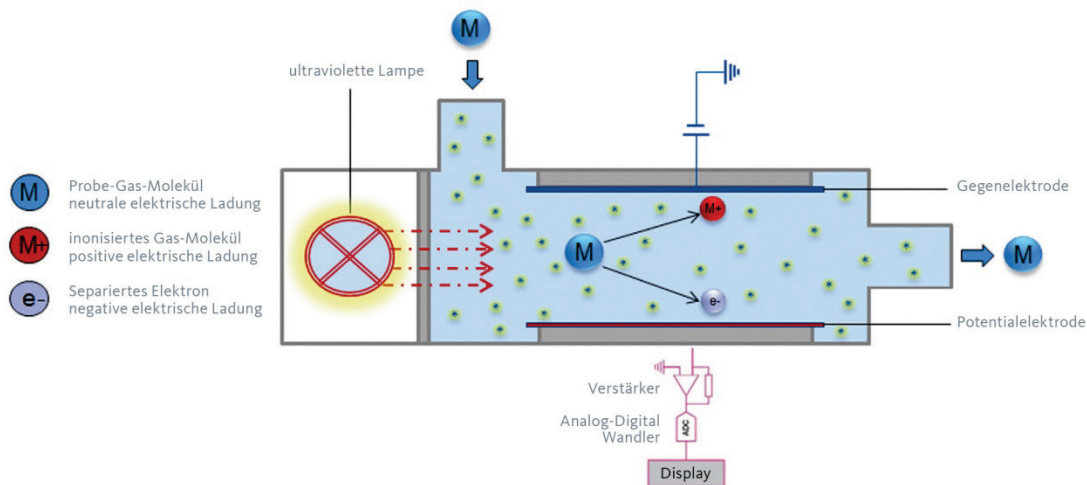

The PID sensor indicates the total concentration of all photo-ionisable compounds contained in the sample and does not distinguish between individual components / substances. Hydrocarbon compounds having less than 6 carbon atoms (<C₆) can also be detected, e.g. Isobutene. The prerequisite for this is however that these molecules are ionised by the UV lamp.

An integrated pressure regulator ensures a constant through flow in the pressure range of 3 ... 16 bar(g). These measures ensure that the same operating conditions are always guaranteed for the PID sensor which, in turn, result in an increase in the measuring accuracy.

The measuring gas through flow and the operating pressure in the measuring chamber of the PID sensor correspond precisely to the calibration conditions. This measure also increases the measuring accuracy of the **METPOINT® OCV compact**.

The function of the reference gas unit and of the PID sensor is permanently monitored for an appropriate operational safety and signalled by an LED. If a defined safety limit value is undershot and/or exceeded, then an alarm will be activated and the user will receive information to state that an inspection of the **METPOINT® OCV compact** is necessary.

In the event of a malfunction, the LED switches from green to red. The measuring gas through flow to the PID sensor will be interrupted and the sensor is protected from excessive loads.

The modular design of the measuring device ensures fast execution of maintenance and service work.

The **METPOINT® OCV compact** is a measuring device with very high measuring accuracy for the determination of the oil content in the compressed air. **To ensure extra precise measurements, all evaluated measuring values are compensated for temperature and pressure.** This means that the compressed air temperature and the measuring chamber pressure will be measured and taken into account during the measurement value formation. **The device therefore fulfils the requirements of ISO 8573-5.**

The residual oil content will be displayed in **mg / Standard m³**.

The standard m³ relates to 1.0 bar absolute, +20°C, 0% relative humidity according to ISO 8573-1.

All accuracy data is based on the operating conditions as defined in the technical data.

3.3.1 Measurement value formation

In order to be able to process the signal voltage of the PID sensor in a processor, it must be initially digitalised. For this purpose, a circuit is implemented which is designated as an analogue - digital converter.

An updated measured value is available every 4 seconds. This measured value is a sliding average value from the last respective 80 seconds.

As is usual with displays with an analogue input, the input signal is initially filtered and then additionally processed. As a result of this filtering, the displayed measured value will not change abruptly, rather it will approach the current one as slightly delayed. This behaviour is systematic and therefore meaningful.

By means of this advantageous calculation method, undesired individual external influences which can be caused, for example, by malfunctions and interruptions in the electric grid or in the compressed air system are effectively suppressed.

3.4 Operating and display elements





3.4.1 LED-Display

The current measured value for the residual oil content in mg / Standard m³ is shown in the 6-digit LED display. The standard m³ relates to 1.0 bar absolute, +20°C, 0% relative humidity according to ISO 8573-1. The process display is equipped with an active current output 4 ... 20 mA and a digital interface RS-485 MODBUS RTU for the transmission of the measured values.

Oil Content mg/m³



3.4.2 Designation and functions of the display buttons

	<p>Function button [ESC / MENU]</p> <ul style="list-style-type: none"> • Opens the main menu (hold down for at least 2 seconds) • Exits the main menu • Cancels the amendment of a parameter in the menu
	<p>Function button [ENTER]</p> <ul style="list-style-type: none"> • Activates the parameter setting • Opens a sub-menu • Confirms the amendment of a parameter
	<p>Function button [▲] [▼]</p> <ul style="list-style-type: none"> • Selects a menu • Amends a selected parameter
	<p>Function button [RESET]</p> <ul style="list-style-type: none"> • Not activated

3.4.3 Operating messages


The operating statuses of the individual components are permanently monitored and signalled by means of LEDs. A potential-free changeover contact provides the possibility of forwarding the operating messages.




<p>Purificator Operation OK Alarm</p>	<p>Operating message PURIFICATOR</p> <ul style="list-style-type: none"> • A green LED indicates the trouble-free operation of the catalytic converter unit for the generation of zero-air, the so-called PURIFICATOR. • In the event of a malfunction of the PURIFICATOR, the LED switches from GREEN to RED.
<p>Oil Content Limit Value OK Alarm</p>	<p>Alarm for limit value for residual oil content</p> <ul style="list-style-type: none"> • A green LED indicates that the set alarm limit for the residual oil content is not exceeded. The desired ISO class is complied with. • When the set limit value is exceeded, then the LED switches from GREEN to RED.
<p>PID Sensor Operation OK Alarm</p>	<p>Operating message PID sensor</p> <ul style="list-style-type: none"> • A green LED indicates the interference-free operation of the PID sensor. • In case of a PID sensor operational malfunction, the LED switches from GREEN to RED.
<p>If a deviation from the defined parameters is detected in the monitoring software, then the programme switches over to safe operation and switches off the compressed air supply to the PID sensor. The alarm status will be signalled by the red LED of the corresponding LED and a potential-free changeover contact switches.</p>	

3.5 Parts and components

The **METPOINT® OCV compact** measuring device for recording vapours and gaseous hydrocarbons in the compressed air comprises the following components:

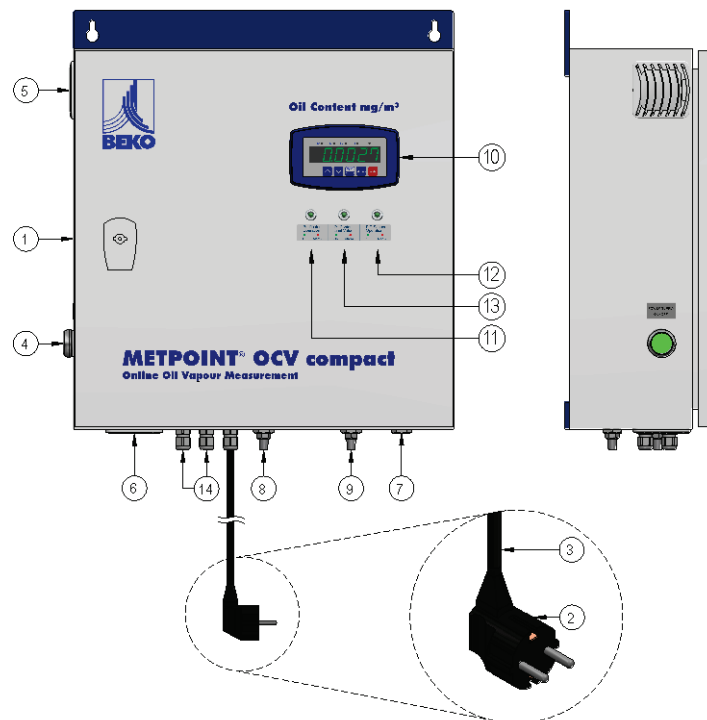


- 1 Wall housing made of steel sheet. Powder coating inside and outside, RAL 7035
- 2 Mains plug with protective contact
- 3 Electrical connection cable, 2.5 m long
- 4 Power switch for electrical power supply
- 5 Ventilation exhaust filters
- 6 Device ventilator with filter
- 7 Connection for the measuring gas: Pneumatic INLET
- 8 Muffler No. 1 for the zero air OUTLET
- 9 Muffler No. 2 for the compressed air OUTLET
- 10 Measured value display
- 11 LED-1 / operating message PURIFICATOR
- 12 LED-2 / operating message PID sensor
- 13 LED-3 / limit alarm for the residual oil content
- 14 Cable glands for customer electrical connections, 6 pieces M12x1.5

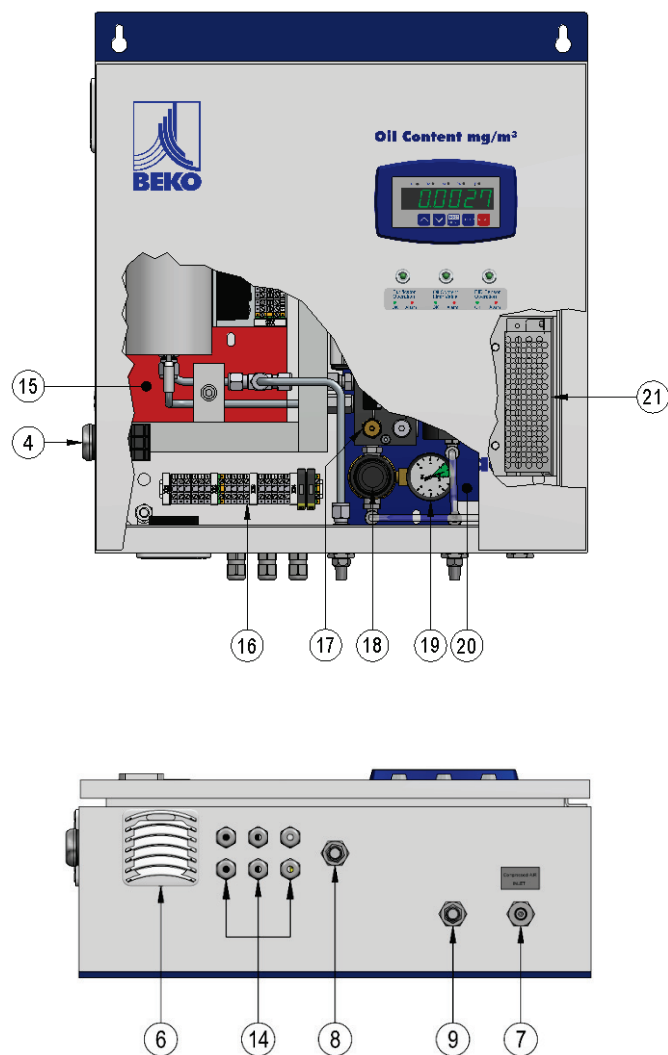

- 15 PURIFICATOR, catalytic converter unit for generating zero-air
- 16 Screw terminals for electrical connections
- 17 Safety valve for the measuring gas components
- 18 Oil and grease-free pressure regulator
- 19 Pressure gauge for measuring gas operating pressure
- 20 Sensor module including solenoid valves, pressure switch, PID sensor and pressure regulator
- 21 Switching power supply for the voltage supply, 100-240VAC / 50-60Hz / $\pm 10\%$

3.6 Pressure reducer for compressed air inlet

There is a pressure reducer, Position 18, for the compressed air located inside the housing of the **METPOINT® OCV compact**. This pressure reducer is used to regulate the pressure of the measurement gas and is set at an operating pressure of approx. 2.5 bar(g) as default.

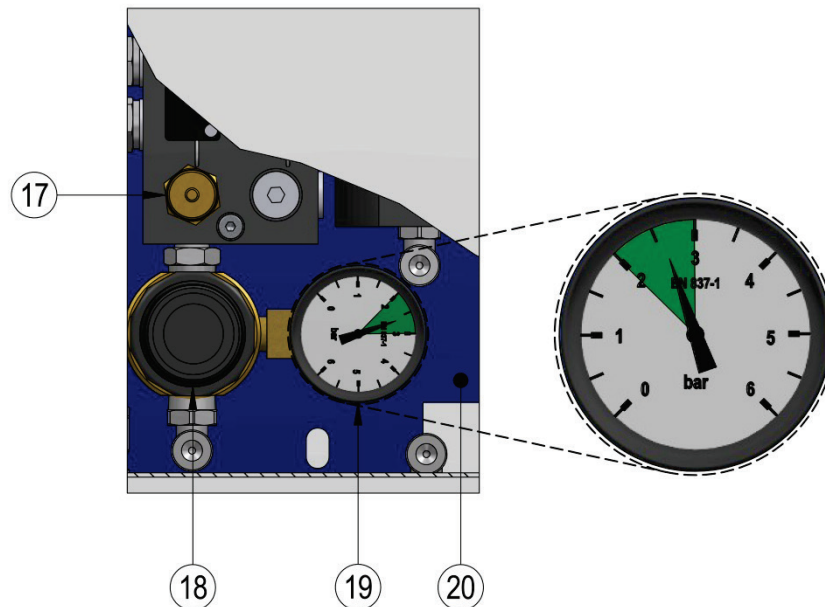


If it is necessary to change the setting of the pressure regulator, proceed as follows:

- Unlock the pressure regulator's adjustment head by pulling the hand wheel upwards.
- Release the line pressure by turning the hand wheel (18) anti-clockwise.
- Turning the hand wheel clockwise produces an increase in the initial pressure. Turning the hand wheel anti-clockwise generates a reduction in the output pressure.
- Control the pressure on the manometer of the pressure regulator.
- Lock the adjustment head of the pressure regulator by pressing the hand wheel downwards.

3.7 Dimensions


All dimensions in mm

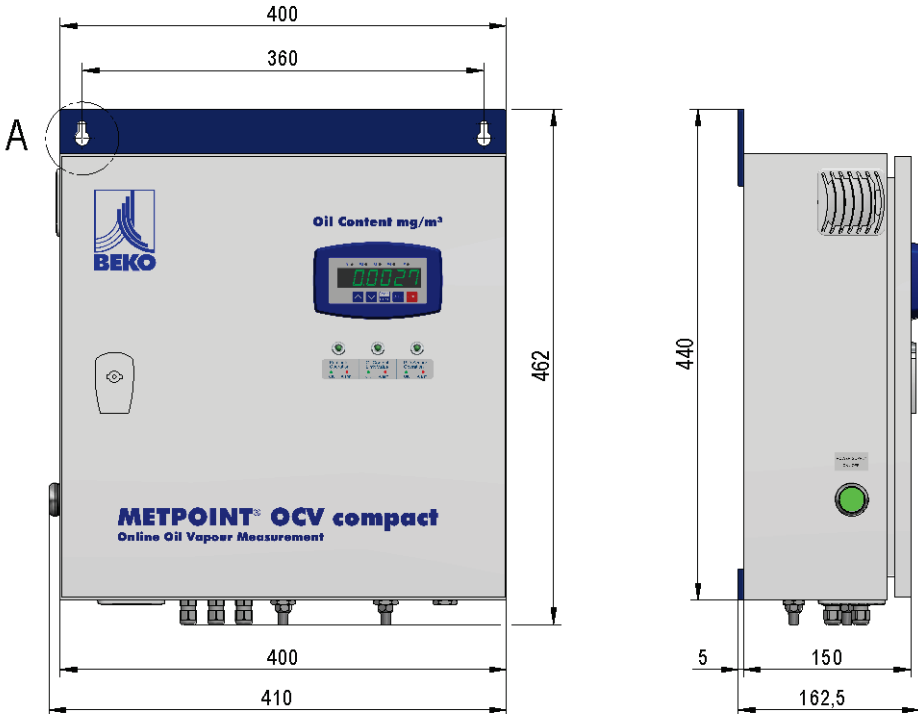

3.8 Technical data METPOINT® OCV compact

Technical data METPOINT® OCV compact® with LED display							
Measuring medium	Compressed air, free of aggressive, corrosive, caustic, toxic, flammable or oxidising integral parts. Fluid group 2 according to pressure device directive 2014/68/EU. The use of a compressed air preparation adapted to the measurement task is necessary.						
Measured parameter	Residual oil content in mg of oil/normal m ³ , relative to 1.0 bar abs., +20°C, 0% relative humidity, according to ISO						
Detectable substances	Polyalphaolefines, aromatics, hydrocarbons, aliphatic hydrocarbons and functional hydrocarbons						
Application areas	Downstream of activated carbon filter or activated carbon adsorber Downstream of BEKOKAT (catalytic converter) Downstream of oil-free compressor Always combined with upstream filtration and drying						
ambient temperature	+5°C to +45°C, relative humidity ≤ 75%, non-condensing						
Storage temperature	+5°C to +50°C						
Ambient pressure	800...1200 mbar absolute						
Climatic resistance	Relative humidity ≤ 75% in annual average without condensation						
Compressed air temperature	+5°C to +50°C						
Excess operating pressure	3 ... 16 bar(g)						
Measuring gas humidity	≤ 40 % relative humidity, DTP maximum +10°C Non-condensing humidity						
Compressed air connection	G 1/8" female thread according to ISO 228-1						
Measurement values	mg / standard m ³ , pressure and temperature compensated						
Measuring range	≤ 0.01 ... 2.50 mg/m ³						
Calibrated measuring range	≤ 0.01...1.25 mg/m ³ residual oil content, according to ISO 8573-1!						
Detection limit (residual oil)	0.001 mg/m ³						
Determination limit (residual oil)	0.003 mg/m ³						
Measuring range and accuracy	<table border="0"> <tr> <td>≤ 0.01 ... 0.5 mg/m³</td> <td>± 30% from average ± 0.001</td> </tr> <tr> <td>≥ 0.5 ... 1.0 mg/m³</td> <td>± 20% from average ± 0.001</td> </tr> <tr> <td>≥ 1.0 ... 2.5 mg/m³</td> <td>± 10% from average ± 0.001</td> </tr> </table>	≤ 0.01 ... 0.5 mg/m ³	± 30% from average ± 0.001	≥ 0.5 ... 1.0 mg/m ³	± 20% from average ± 0.001	≥ 1.0 ... 2.5 mg/m ³	± 10% from average ± 0.001
≤ 0.01 ... 0.5 mg/m ³	± 30% from average ± 0.001						
≥ 0.5 ... 1.0 mg/m ³	± 20% from average ± 0.001						
≥ 1.0 ... 2.5 mg/m ³	± 10% from average ± 0.001						

Technical data METPOINT® OCV compact® with LED display	
Measuring gas through flow rate	Approx. 1.20 Standard litre / minute relative to 1.0 bar absolute and +20°C, depressurised status
Power supply	100-240 VAC / 1Ph. / PE / 50-60 Hz / ± 10%
Maximum operating current	0.50 A at 230 VAC / 0.90 A at 115 VAC
Power consumption	115 VA at 230 VAC / 104 VA at 115 VAC
Internal backup	2.5 AT (inertia)
Power cable	Maximum diameter: 6.5 mm, strand cross-section: 0.75 mm ² , with protective contact plug and PE protection
Protection class	IP54 / DIN EN 60529
Outputs	4 ... 20 mA active analogue output, 2-wire system, RS-485, MODBUS RTU for the transmission of measured values, 1 alarm contact, normally open contact
Dimensions	410 x 462 x 162.5 mm (W x H x D)
Weight	Approx. 16.3 kg

NOTE	Additional information
	<ul style="list-style-type: none"> • The measuring gas will be released to the ambient air. Observe the resulting concentrations at the installation location of the METPOINT® OCV compact. Ensure adequate ventilation. • Nachweisgrenze / Limit Of Detection, LOD Extreme value of measuring method, up to which the measured value can still be reliably detected. It is therefore a qualitative (yes/no) limit. • Bestimmungsgrenze / Limit Of Quantification, LOQ The smallest concentration of an analyte, which can be determined quantitatively with the specified accuracy. Quantitative results with the specified accuracy will only be initially indicated above the limit of quantification.

3.9 Applied EU Directives and harmonised standards

The device fulfils the essential requirements of the following directives and harmonised standards:

2014/68/EU Pressure Equipment Directive

2014/35/EU Low Voltage Directive

2014/30/EU Guideline relating to electromagnetic compatibility, EMC directive


EN 61010-1 Safety requirements for electrical measuring, control, regulating and laboratory equipment


EN 61326-1 Electrical equipment for measurement, control, regulating and laboratory use
EMC requirements


The declaration of conformity can be found in the appendix of this manual or can be obtained from **BEKO Technologies GmbH**.


4 Assembly


4.1 Safety instructions

NOTE	Skilled technical personnel
	<ul style="list-style-type: none"> • Installation and assembly works may only be executed by qualified, skilled personnel after thoroughly studying the the original operating instructions. • It is the responsibility of the product operator to ensure that the instructions in this manual are adhered to. The qualification and knowledge of skilled technical personnel must be assessed according to the applicable regulations and standards. • To ensure safe operation, the system must be installed and operated according to the instructions in this operating manual. In addition to these instructions, always comply with the required statutory regulations for the application cases for system operation and company safety regulations as well as accident prevention regulations. This also applies analogously to the use of accessories and spare parts.


DANGER!	Compressed air! Gases under high pressure
	<ul style="list-style-type: none"> • Never work on any of the compressed air systems when they are pressurised. • The owner and/or operator must ensure that the system is never operated at a pressure higher than the maximum pressure value indicated on the rating plate. • Exceeding the maximum operating pressure can be dangerous for the operator as well as for the system.

CAUTION	Compressed air quality
	<ul style="list-style-type: none"> • The compressed air must be free of aggressive, corrosive, caustic, toxic, flammable or oxidising substances. • The compressed air must be supplied free of dust and water. • The maximum relative humidity of the compressed air must be less than 40 % (maximum pressure dew point of + 10 ° Ctd). • The use of a compressed air preparation adapted to the measurement task is necessary.


DANGER!	Electric power
	<p>Touchable conductive parts can lead to dangerous voltages / mains voltage during installation and maintenance or in case of defects. Hazard resulting in of serious or even fatal injury from electric shock when coming into contact with uninsulated parts or mains voltage.</p> <ul style="list-style-type: none"> • All works on the electrical parts of the measuring system may only be executed by appropriately trained skilled personnel. • The measuring device must not be operated when the power supply cables indicate damage or the housing parts have been damaged or removed. • The local valid legal regulations and provisions must be complied with without exception. • Observe the electrical data provided on the rating plate. • Work on the electrical connections may only be executed when the power supply is switched off. The device must be protected against unintentional reconnection or switching on again. • Only utilise components for the electrical installation which have a current approval and are labelled with a CE-Identification Marking. • The wire ends to be connected to the control unit must be equipped with wire-end ferrules. • All electrical connections must be inspected before commissioning and at regular intervals.

WARNING!	Operation of plant outside limit range
	<p>If the specified limiting values are undershot and/or exceeded, then there will be a danger for people or materials and device malfunctions and operation malfunctions could occur as well as incorrect measuring results.</p> <ul style="list-style-type: none">• The METPOINT® OCV compact measuring device may only be used in accordance with its intended use and within the permitted limiting values stated on the rating plate as well as in the technical data.• Always adhere to the permitted storage and transport conditions.

4.2 Fundamental requirements for the installation

NOTE	Execute a temperature compensation
	<p>High ambient temperature fluctuations during transport, storage or installation, can cause damage to the device or impair its measuring accuracy.</p> <ul style="list-style-type: none"> • Ensure that the METPOINT® OCV compact has been unpacked and stored at the installation site approx. 3 hours before the installation and temperature compensation with the environment has been possible. During the acclimatisation time, do not connect the measuring device to the electric power supply. • The catalytic converter unit PURIFICATOR for the reference gas generation system requires a pre-heating time of approx. 0.5 hours. No compressed air must flow through the METPOINT® OCV compact until this time period has expired. • This process is particularly important where there are significant temperature difference between the transport/storage location and the operating environment.

- Installation in inappropriate ambient conditions will affect the results of the measurement and can result in malfunctions and damage to the measuring device.
- The installation location of the **METPOINT® OCV compact** measurement system must be easily accessible.
- Always select a clean and dry zone, free of dust, which is protected against atmospheric disturbances.
- Protect the measuring device against direct sunlight.
- Never install the **METPOINT® OCV compact** in an environment where corrosive chemicals, explosive gases, toxic gases, high ambient temperatures, heat from evaporation or extreme soiling, dirt or dust are present.
- The load bearing area must be smooth and capable of supporting the weight of the measuring device.
- No vibrations, oscillations or pulsations may be transmitted to the measuring device.
- Overheating will damage the electronic components.
- Minimum ambient temperature +5 °C
- Maximum ambient temperature + 45 °C
- Always ensure unimpeded air exchange and sufficient ventilation.

NOTE	Quality of connecting components
	The connecting pipework, fittings and shaped pieces must be free of dust, rust, oil, grease and other contamination or impurities.

Please note:

- Only ever use fittings and connecting elements which are approved for this application.
- Only ever use pipework, valves and fittings which are suitable for the pressure and temperature range. Always adhere to the manufacturer's instructions.
- Pay attention to the correct installation of the connections.
- After installation, inspect all pipe and cable connections and tighten them when necessary!
- Prior to commissioning, a leak test must be executed by appropriately qualified, skilled personnel and observing the safety regulations.


The **METPOINT® OCV compact** has been developed for the detection of vapours and gaseous hydrocarbons in compressed air free from aggressive, corrosive, toxic and inflammable components.

The measuring gas must be supplied to the measuring device free of dust and water. The utilisation of a compressed air treatment plant adjusted to the measurement task is therefore necessary in most application cases.

In the following, installation examples for the compressed air treatment will be represented to illustrate how the **METPOINT® OCV compact** measuring device can be operated without any problems.

4.2.1 Compressed air treatment with a **BEKOKAT®** catalytic converter


The represented installation indicates the minimum requirement for installing the **METPOINT® OCV compact** measuring device in combination with a **BEKOKAT®** catalytic converter. Other installation types (as long as they ensure the defined operating conditions) are possible.

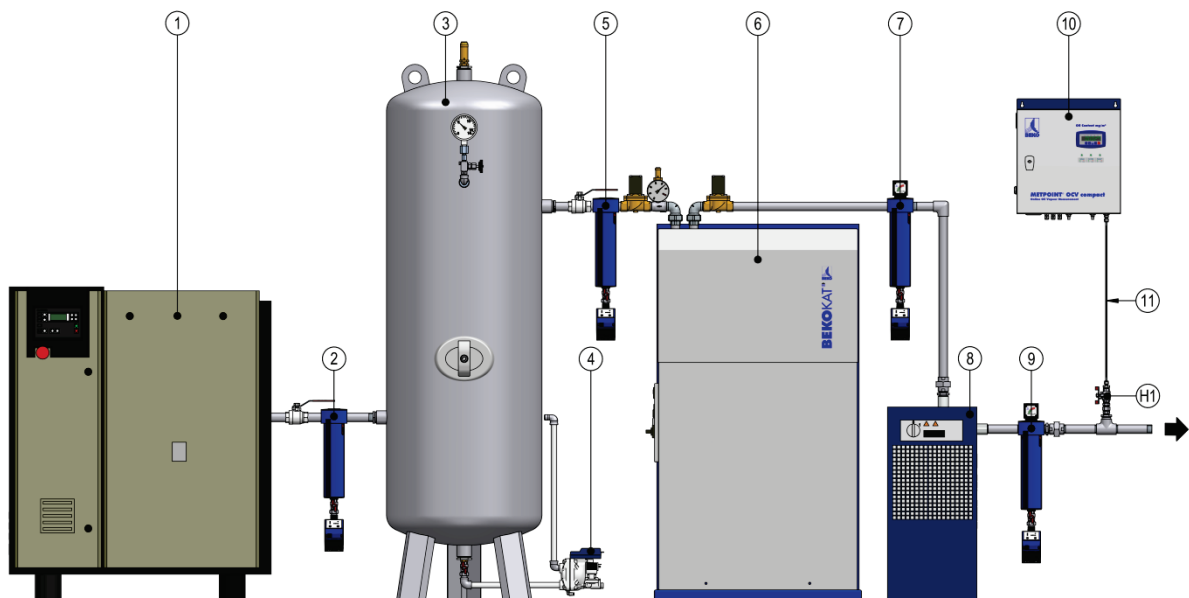

- 1 Compressed air compressor (oil lubricated)
- 2 Water separator with condensate arrester **BEKOMAT®**
- 3 Compressed air vessel
- 4 Condensate arrester **BEKOMAT®** for boiler drainage
- 5 Universal filter (G) with **BEKOMAT®** (option for heavily soiled or contaminated compressed air)
- 6 Universal filter (G) with **BEKOMAT®** (option for heavily soiled compressed air)
- 7 Oil-free and grease-free dust filter (F) with **BEKOMAT®**
- 8 Oil-free and grease-free **DRYPOINT® RA** refrigeration dryer
- 9 Oil-free and grease-free super fine filter (S) with **BEKOMAT®**
- 10 **METPOINT® OCV compact** measuring device
- 11 Oil-free and grease-free connection pipework made of stainless steel
- H1 Oil-free and grease-free shut-off ball valve

4.2.2 Compressed air treatment with activated carbon adsorber


The installation represented shows the minimum requirement for the installation of the **METPOINT® OCV compact** measuring device in combination with a **CLEARPOINT® LV** activated carbon adsorber. Other installation types (as long as they ensure the defined operating conditions) are possible.

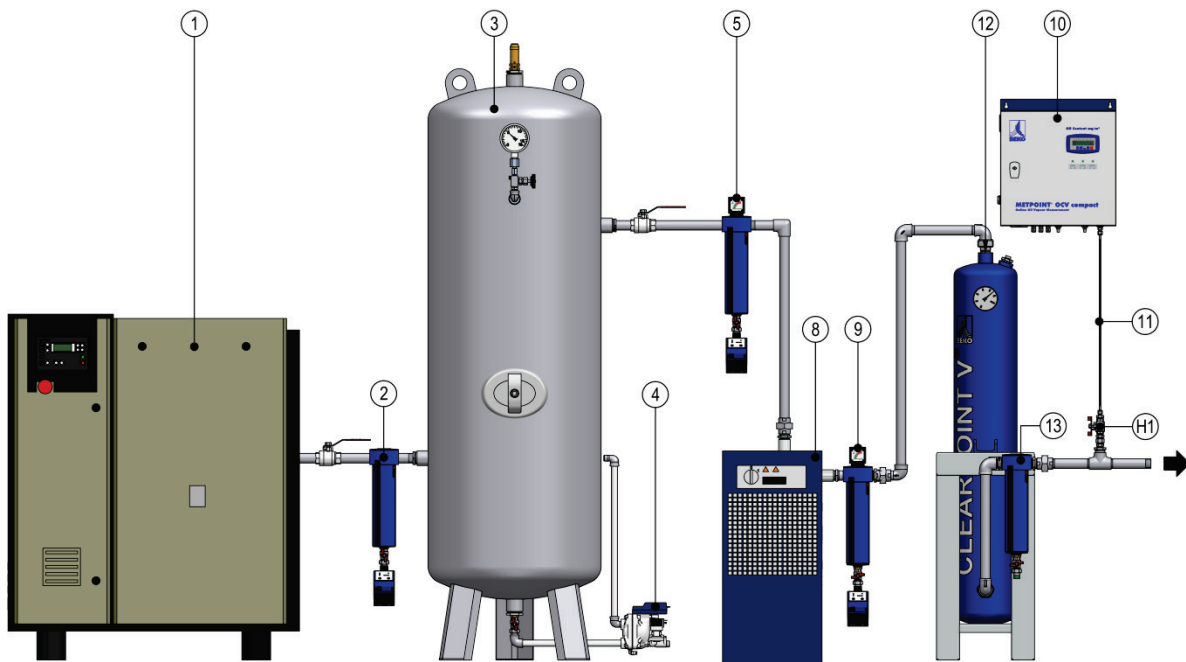

- 1 Compressed air compressor (oil lubricated)
- 2 Water separator with condensate arrester **BEKOMAT®**
- 3 Compressed air vessel
- 4 Condensate arrester **BEKOMAT®** for boiler drainage
- 5 Universal filter (G) with **BEKOMAT®** (option for heavily soiled or contaminated compressed air)
- 8 Refrigeration dryer **DRYPOINT® RA**
- 9 Super fine filter (S) with **BEKOMAT®**
- 10 **METPOINT® OCV compact** measuring device
- 11 Oil-free and grease-free connection pipework made of stainless steel
- 12 Oil- and grease-free activated carbon adsorbers **CLEARPOINT® LV**
- 13 Oil-free and grease-free dust filter (F) **CLEARPOINT®**
- H1 Oil-free and grease-free shut-off ball valve

4.2.3 Compressed air treatment with oil-free compressing compressor


The represented installation indicates the minimum requirement for installing the **METPOINT® OCV compact** measuring device in combination with an oil-free compressing compressed air compressor. Other installation types (as long as they ensure the defined operating conditions) are possible.


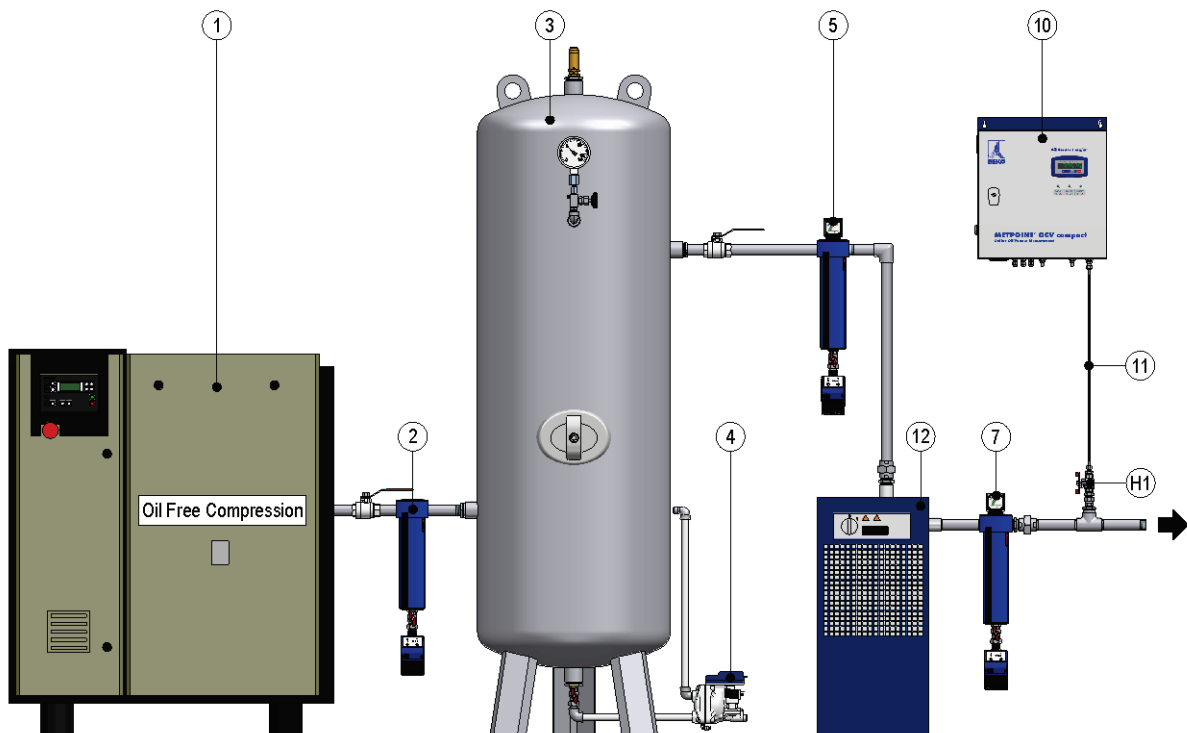


- 1 Compressed air compressor (oil-free compression)
- 2 Water trap separator with condensate arrester **BEKOMAT®**. Oil-free and fat-free.
- 3 Pressure vessel. Ensure oil and grease free design
- 4 Condensate arrester **BEKOMAT®** for boiler drainage
- 5 Universal filter (G) with **BEKOMAT®**. Oil-free and fat-free.
- 8 Oil-free and grease-free **DRYPOINT®** RA refrigeration dryer
- 9 Oil-free and grease-free super fine filter (S) with **BEKOMAT®**
- 10 **METPOINT® OCV compact** measuring device
- 11 Oil-free and grease-free connection pipework made of stainless steel
- H1 Oil-free and grease-free shut-off ball valve

4.3 Wall mounting

The device must be assembled vertical on the wall using suitable wall plugs and screws. Refer to the following drawings for details.


NOTE	Quality of connecting components
	Always use fixtures that can carry at least 4 times the weight of the device (70 kg) for wall mounting.

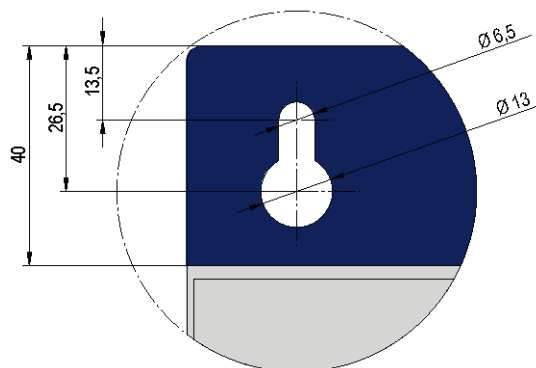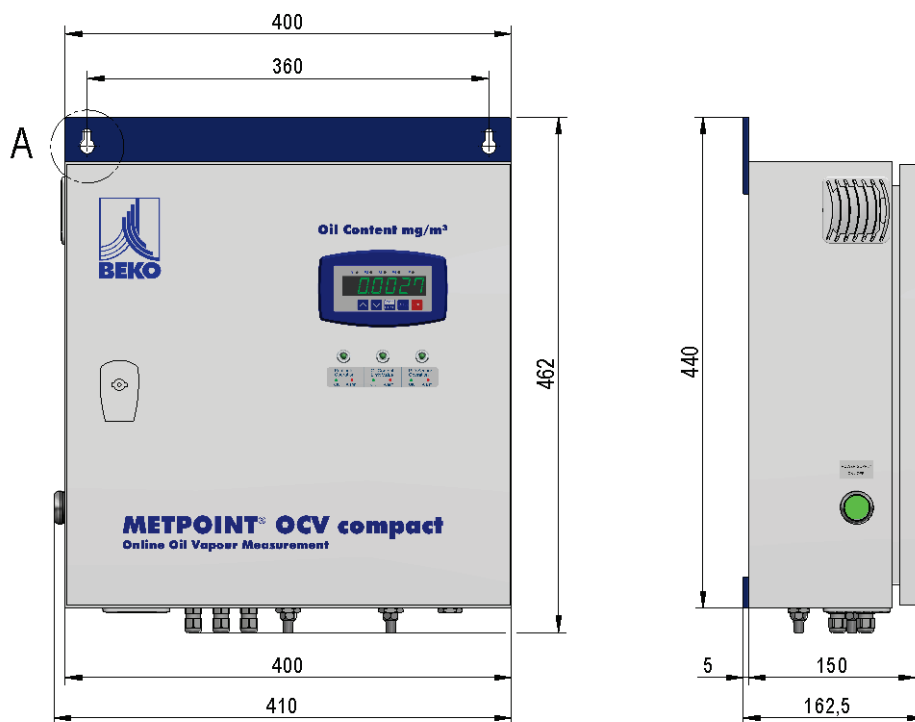

Detail A

4.4 Device connections

All the connections necessary for operation are located on the underside of the housing.

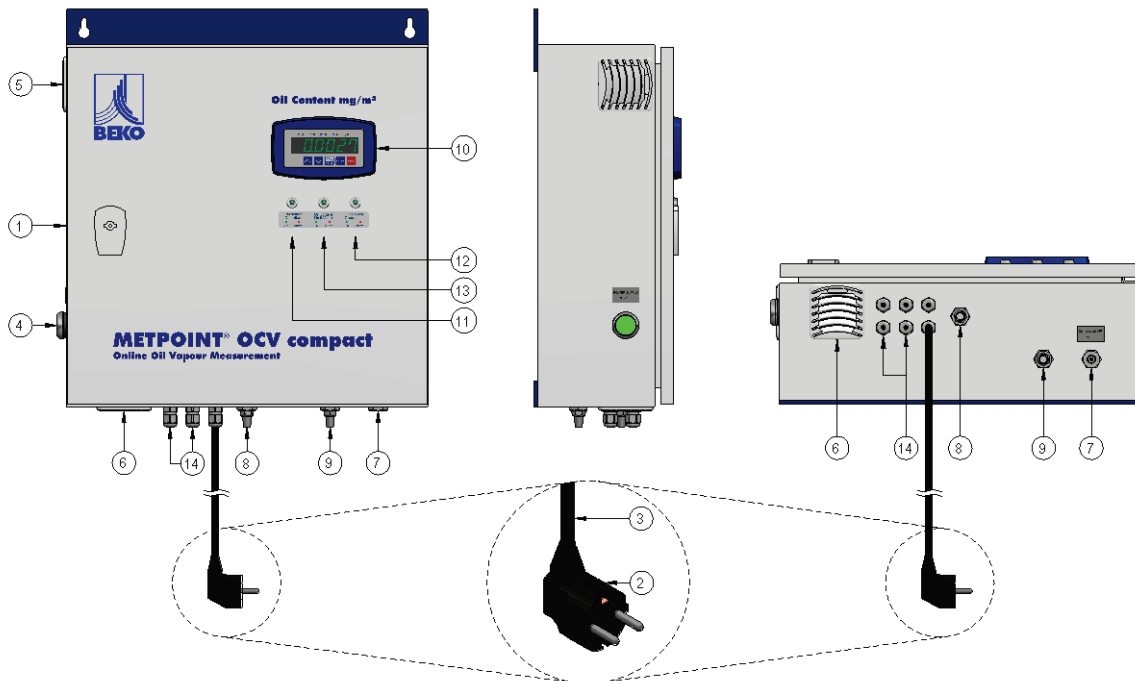

- 2 Mains plug with protective contact
- 3 Electrical connection cable, 2.5 m long
- 4 Power switch for electrical power supply
- 6 Device ventilator with filter
- 7 **Compressed air INLET, female thread G1/8" / ISO 228-1**
- 8 Muffler No. 1 for the zero air OUTLET
- 9 Muffler No. 2 for the compressed air OUTLET
- 14 Cable glands for customer electrical connections, 6 pieces M12x1.5

4.5 Assembly of compressed air connection

The process connection for compressed air **Position 7** is located on the underside of the housing.

The connection is designed as a **cylindrical internal thread G1/8"** according to **ISO 228-1**.

This connection is used to connect the measuring device to the compressed air system.

The pipe connections must be sealed with appropriate sealing rings.

4.5.1 Sampling

The sampling type and method is also of particular importance to ensure an accurate oil content measurement. The sample should be taken at a point where it can be ensured that a **representative and usable mixture** of all components of the compressed air is present.


In the case of gaseous and vaporous organic substances, it can be assumed that they are distributed homogeneously over the measurement cross-section. In the case of a homogeneous distribution, the gases can be removed at a fixed point approximately at the centre of the measuring cross-section.

The use of the measuring sections from **BEKO TECHNOLOGIES GmbH** will always guarantee a representative sample collection in all cases. **The use of a measuring section can only be explained with the representative sample collection and not with the functional principle of the METPOINT® OCV compact.**


Depending on operating and installation conditions, the use of a measuring section can be omitted in certain cases. In this case, the decision must be weighed up on the basis of how high are the costs for the measuring section on the one hand and, alternatively, how high will the possibly invalid measuring results be.

The following sampling options are available:

- Sampling by means of a measuring section with probe

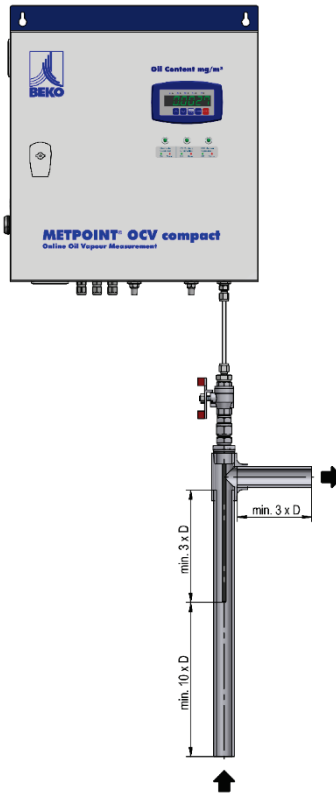


- Sampling by means of a T-piece

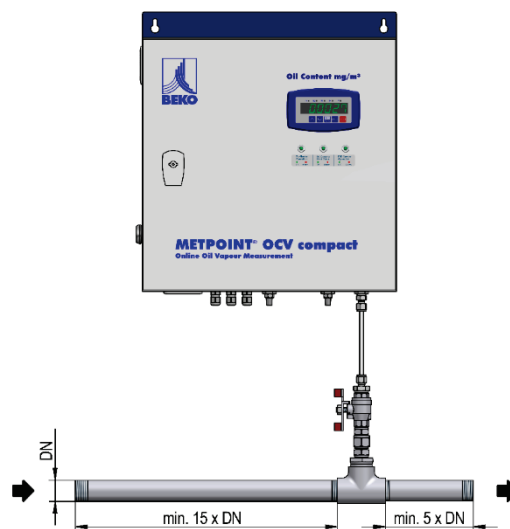

4.5.2 Connection to the compressed air system



After you have selected the appropriate type of sampling, proceed as follows to connect the measuring device to the compressed air network:

1. Connect the measuring device correctly to the compressed air line.
2. Inspect compliance with the safety instructions for the ambient conditions.
Refer to the chapter for "Assembly"
3. Inspect compliance with the safety instructions relating to the **quality of the compressed air**.
Refer to the chapter for "Assembly"
4. Inspect compliance with the safety instructions relating to the **quality of the connection components**. Refer to the chapter for "Assembly"
5. The following connection is recommended between the shut-off ball valve **Position H1** and the **compressed air INLET Position 7** of the measuring device:

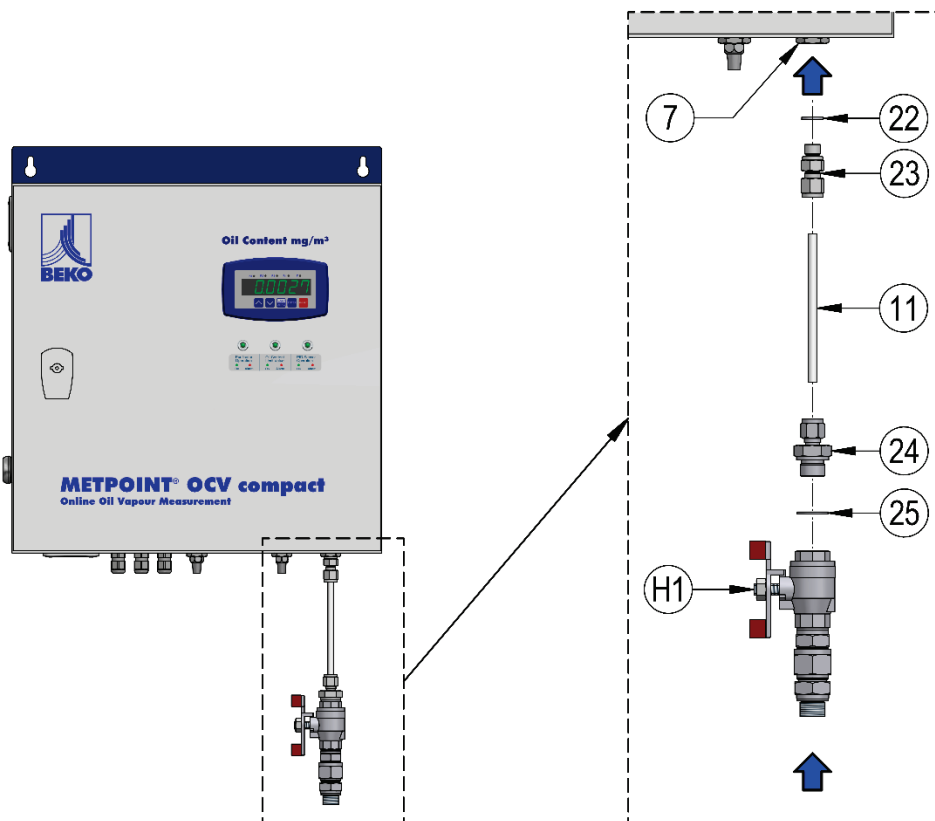

The following oil-free and fat-free connection components will be utilised

- Position 11 Seamless stainless steel pipe, **Ø 6 x 1.0 mm**, Material No. 1.4571, delivery conditions according to EN 10216-5, **oil-free and grease-free design**
- Position 22 Sealing ring for ISO parallel thread, **G1/8"**, stainless steel sealing ring with VITON (FKM) model KPC-C-01-316VD, manufactured by Hy-Lok
- Position 23 Clamping ring bolt, metric pipe on ISO parallel thread (G-thread, ISO 228-1) **G1/8" external thread x Ø 6 mm**, model CMC6M-2G Manufacturer Hy-Lok
- Position 24 Clamping ring bolt, metric pipe on ISO parallel thread (G-thread, ISO 228-1) **G3/8" external thread x Ø 6 mm**, model CMC6M-6G Manufacturer Hy-Lok
- Position 25 Sealing ring for ISO parallel thread, **G3/8"**, stainless steel sealing ring with VITON (FKM) model KPC-C-03-316VD, manufactured by Hy-Lok

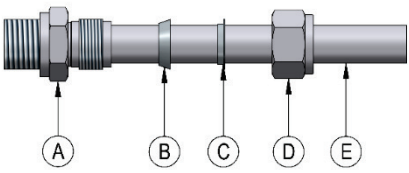Structure of a clamping ring bolt connection	
	
<p>Position A Bolt body</p> <p>Position B Front clamping ring</p> <p>Position C Rear clamping ring</p>	<p>Position D Locking nut</p> <p>Position E Seamless stainless steel pipe</p>
<p>During assembly, the rotational movement of the nut is converted by the rear clamping ring into an axial movement along the pipe. The sealing on the front clamping ring is executed by the axial pressing and non-rotation. As a result, neither depths nor tensions are created on the pipe.</p>	
<p>Note</p> <ul style="list-style-type: none"> Never force the pipe into the clamping rings. If the pipe cannot be pushed easily into the bolted connection, then it could be that it has not been deburred or it is oval. Use a sharp pipe cutter and do not exert too much pressure on the cutting wheel. This prevents deformations at the end of the pipe. 	


Assembly instructions for Hy-Lok compression fittings

Initial assembly

To avoid confusion or contamination during disassembly, Hy-Lok bolted connections are delivered ready for installation and finger-tightened. The pipe must be cut at right angles and deburred.


Step 1

Push the pipe carefully and gently into the bolted connection as far as it will go.

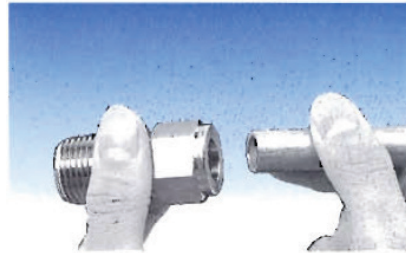

Step 2

Ensure that the nut is hand-tightened. Mark the 6 o'clock position as the starting point for the assembly. Then tighten the nut **1 1/4 turns**. Hold the fitting body with a second wrench.

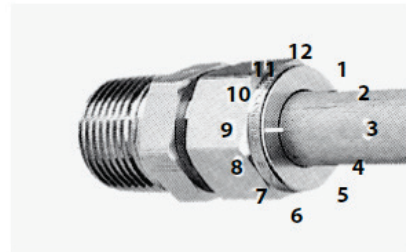

Reassembly

The bolted connections can be loosened several times and reassembled. Ensure that the sealing surfaces are clean and positioned on the surface without damage.


1. Slide the pipe with the clamping rings up to the end stop in the fitting body.
2. Turn the nut finger-tight and then tighten it with a wrench until you feel a strong increase in the force which needs to be exerted, about **1/4 turn!** Hold the fitting body tightly with a second wrench. The tight manufacturing tolerances will cause the marking to be in the same position as after the initial assembly.


6. Inspect all bolt fittings for correct seating and tightness.


7. Subsequently initiate a leak tightness examination for the whole installation.


4.6 Electrical installation


4.6.1 Safety instructions

DANGER!	Electric power
	<p>Touchable conductive parts can lead to dangerous voltages / mains voltage during installation and maintenance or in case of defects. Hazard resulting in of serious or even fatal injury from electric shock when coming into contact with uninsulated parts or mains voltage.</p> <ul style="list-style-type: none"> • All works on the electrical parts of the measuring system may only be executed by appropriately trained skilled personnel. • The measuring device must not be operated when the power supply cables indicate damage or the housing parts have been damaged or removed. • The local valid legal regulations and provisions must be complied with without exception. • Observe the electrical data provided on the rating plate. • Work on the electrical connections may only be executed when the power supply is switched off. The device must be protected against unintentional reconnection or switching on again. • Only utilise components for the electrical installation which have a current approval and are labelled with a CE-Identification Marking. • The wire ends to be connected to the control unit must be equipped with wire-end ferrules. • All electrical connections must be inspected before commissioning and at regular intervals.


DANGER!	Operation without earth connection
	<p>If there is a fault but no earth connection (protective earth), conductive components might become energized, posing a risk of serious or even fatal injury.</p> <p>The device is earthed via the mains cable.</p> <ul style="list-style-type: none"> • The system must always therefore be earthed and/or connected to a protective earth conductor. • The device may only be connected to an earthed socket. • Do not use plug adapters at the power plug. If required, have the power plug replaced by a qualified electrician. • Only use the supplied mains cable for connecting the system. • Only replace a damaged mains power cable with an equivalent cable.

DANGER!	Operation without circuit breaker
	<p>All components that are dangerous when touched due to their voltage must be disconnectable by means of dedicated external circuit breakers.</p> <ul style="list-style-type: none"> • The circuit breaker must be installed in the vicinity of the device. • The circuit breaker must conform to IEC 60947-1 and IEC 60947-3. • The circuit breaker must disconnect all electrical conductors from the mains power supply. • The circuit breaker must not be installed in the power supply line. • The circuit breaker must at all times be easily accessible to operating personnel.

DANGER!	Power supply - External power circuits
	<p>When wiring the electric power supply line, ensure that the double or reinforced insulation between the electric circuits and the secondary circuit remains intact.</p> <ul style="list-style-type: none">• The additional insulation must be suitable for a test voltage of 1500 VAC.• The thickness of the insulation must be at least 0.4 mm, □ e.g. insulating sleeve, model BIS 85 (Bierther GmbH).

DANGER!	Damaged power cable
	<ul style="list-style-type: none">• Only use the supplied mains cable for connecting the system.• Only replace a damaged mains power cable with an equivalent cable. The specification for the mains supply can be found in Chapter 7.6

4.6.2 Electrical connections

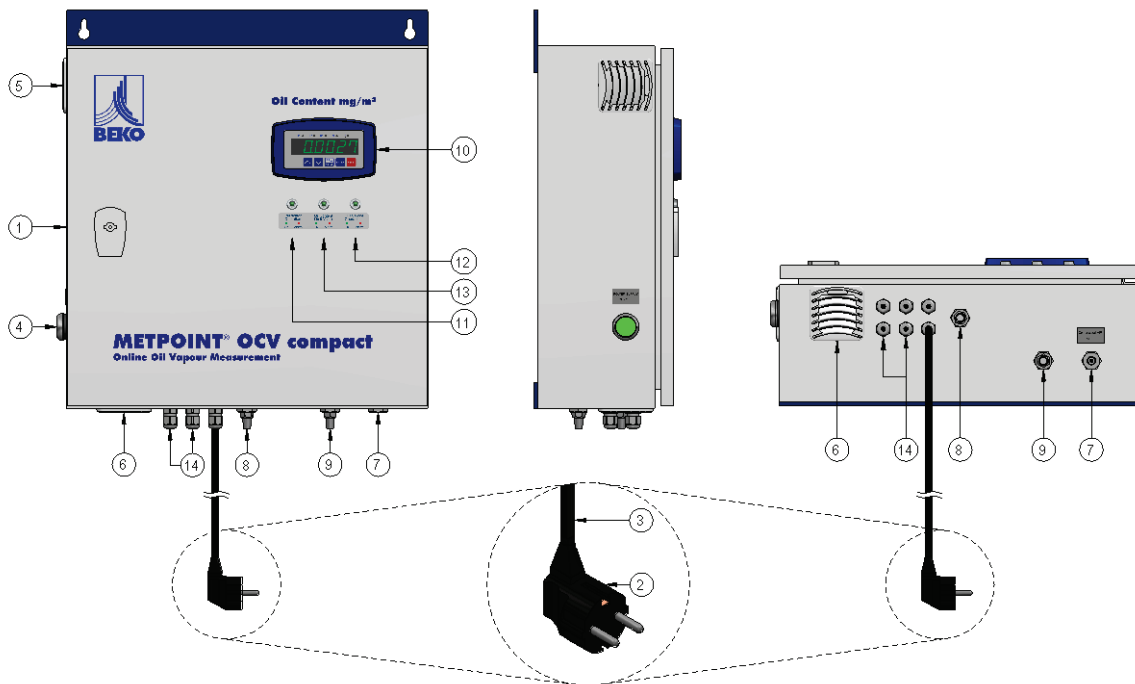



- 2 Mains plug with protective contact
- 3 Electrical connection cable, 2.5 m long
- 4 Power switch for electrical power supply
- 6 Device ventilator with filter
- 7 Connection for the measuring gas: Pneumatic INLET
- 8 Muffler No. 1 for the zero air OUTLET
- 9 Muffler No. 2 for the compressed air OUTLET
- 14 Cable glands for customer electrical connections, 6 pieces M12x1.5

The cable glands for electrical and signal connections are located on the underside of the **METPOINT® OCV compact**. The **potential-free alarm contacts** for the operating messages, for exceeding the set limit values for the oil content and signal connections (**4-20 mA / RS485-MODBUS RTU**) are connected here for forwarding the current measured values.


4.6.3 Power supply and fuses

The measuring device is supplied with a mains cable and is intended for connection to a protective earthed mains socket. The device is equipped with a wide-range voltage input and can be operated from 100 ... 240 VAC mains voltage at 50 ... 60 Hz mains frequency. The socket must be fused with a 2 to 16 A line circuit breaker.


The measuring device is equipped with a two-pin ON / OFF switch for the electrical voltage supply.

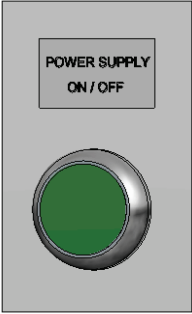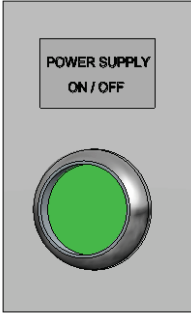
Position 4 ON / OFF switch with luminaire		
		<p>The ON / OFF switch is designed as an illuminated push button with a latching function. If the button is located in the lower position - ON position - (lowered button), then the voltage supply is present on the device. A green light indicates the operating condition.</p>



Furthermore, the device is fused on the primary side with two fuses of **2.5 A load**. These are located in the fuse holders of terminals **X24: L** and **X24: N** and are marked with **F2** and **F3**.

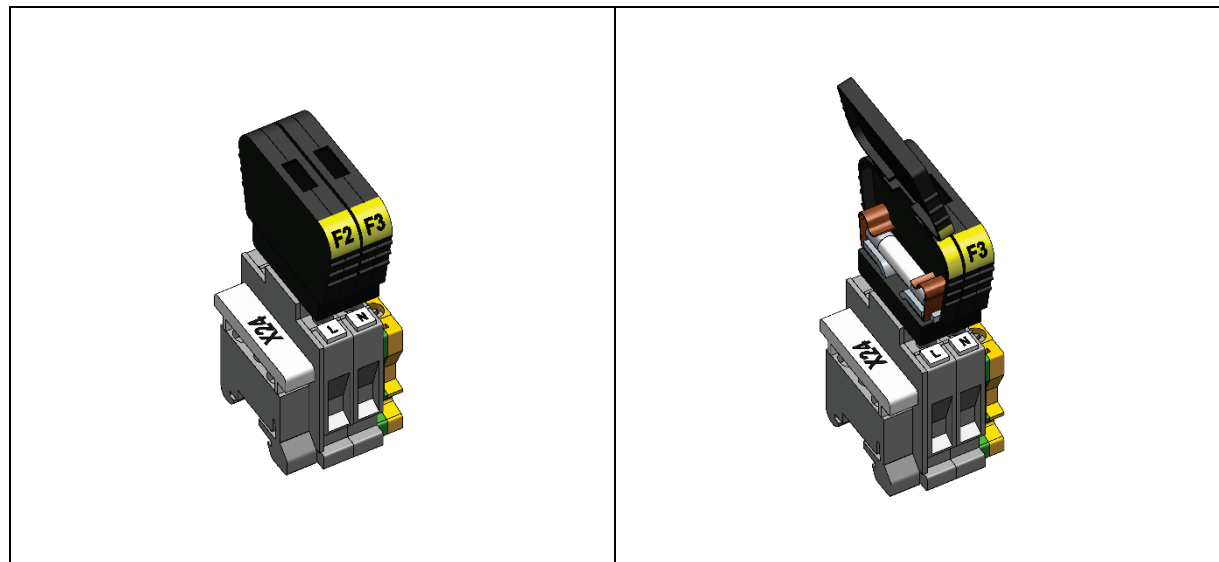

4.6.4 Terminals for electrical connections

CAUTION	Electrostatic Discharge (ESD)
	The housing must be opened to install the analogue and digital outputs. Electrostatic discharges can damage the unit. Follow the instructions for ESD protection in Chapter "7.1.1" Preventing electrostatic discharge (ESD) ".

NOTE	Execute a temperature compensation
	<p>High ambient temperature fluctuations during transport, storage or installation, can cause damage to the device or impair its measuring accuracy.</p> <ul style="list-style-type: none"> • Ensure that the METPOINT® OCV compact has been unpacked and stored at the installation site for approx. 3 hours before the installation and temperature compensation with the environment has been possible. During the acclimatisation time, do not connect the measuring device to the electric power supply. • The catalytic converter unit PURIFICATOR for the reference gas generation system requires a pre-heating time of approx. 0.5 hours. No compressed air must flow through the METPOINT®OCV compact until this time period has expired. • This process is particularly important where there are significant temperature difference between the transport/storage location and the operating environment.

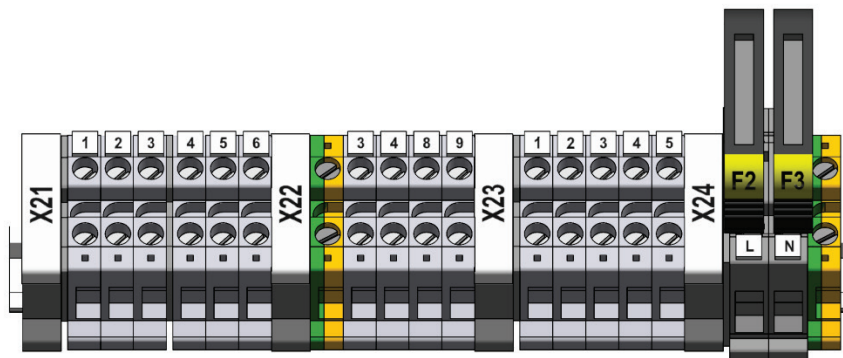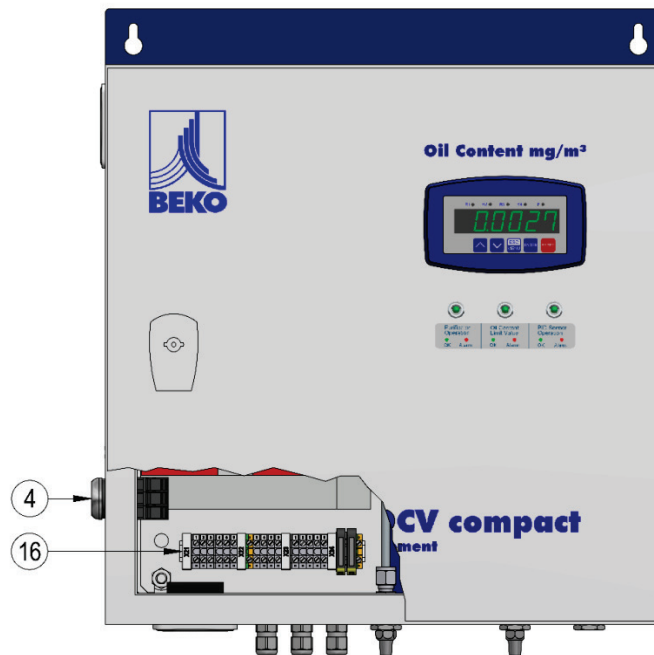


- Position 4 Power switch for electrical power supply
- Position 16 Screw terminals for electrical connections

All electrical connections are screw terminals. The maximum cross section for electrical cables is **2.5 mm²**.

Open the device, insert the cables through the screw connections into the device and connect the cables according to the following terminal assignment. Then firmly tighten the cable glands. Close unused feed-throughs with a blind plug. Close the unit again.

Do not connect the mains plug until the temperature has been adjusted.

For the electrical installation, refer to the table and wiring diagrams below.

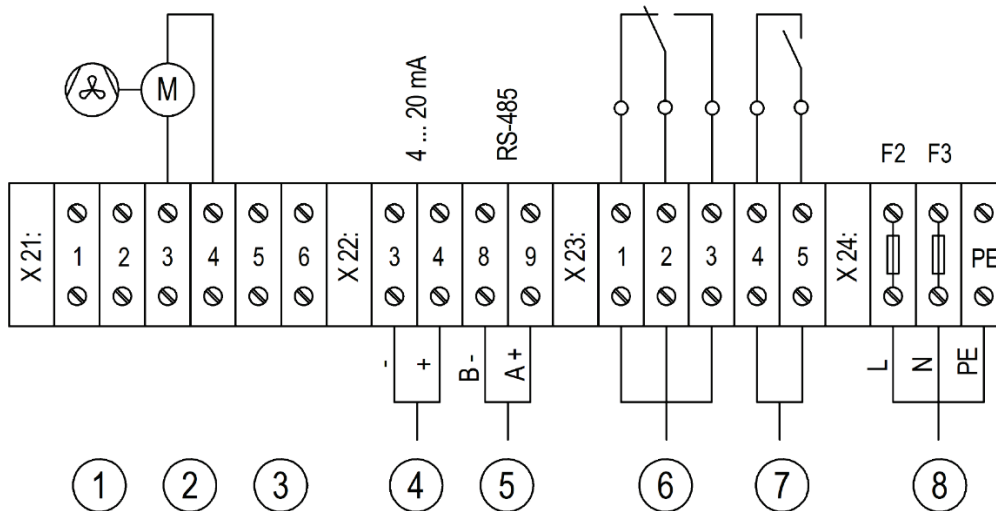

Position	Connection designation	Terminal block / terminals			
1	Power supply 24 VDC , for internal connections	X21:	1	2	
2	Power supply 24 VDC , for the internal device fan	X21:	3	4	
3	Power supply 24 VDC , for the internal connections	X21:	5	6	
4	Active analogue output 4 ... 20 mA , for measured value transmission, 0 ... 2.5 mg oil/m³	X22:	3	4	
5	Digital output RS-485 (MODBUS RTU) for measured value transmission, 0 ... 2.5 mg oil/m³	X22:	8	9	
6	Potential-free changeover contact for forwarding the operating messages and alarms of the PURIFICATOR unit and the PID sensor. Contact load of relay ¹⁾ : Maximum operating voltage: 250 VAC / 30 VDC Maximum operating current 3 A, ohmic load, cos φ =1.0	X23:	1	2	3
7	Potential-free normally open contact Limit value alarm for the residual oil content. Contact load of relay ¹⁾ : Maximum operating voltage: 250 VAC / 30 VDC Maximum operating current 1 A, ohmic load, cos φ =1.0	X23:	4	5	
8	Power supply 100-240 VAC / 1Ph. / 50-60 Hz / PE / ± 10%	X24:	L	N	PE

1) General information about the contact load of relays

Every electrical consumer represents a mixed load with ohmic, capacitive and inductive shares. When switching these loads, a more or less large load will be produced for the switching contact. This load can be reduced by a suitable contact protection circuit. Since in practice mainly consumers with large inductive shares such as contactors, solenoid valves, motors, etc. are implemented, then these applications should be considered in more detail.

Due to the energy stored in the coil, voltage peaks with values up to several thousand volts will be generated when switching off. These high voltages cause an arc on the switching contact which can destroy the contact by material evaporation and material migration. The electrical service life is thereby considerably reduced.

In an extreme case, the relay can fail during the first switching operation when the voltage is constant and the arc is at a standstill. To suppress the formation of the arc, a protective circuit must be used. With optimised dimensioning, nearly all the same switching cycles can be achieved as with ohmic load.


In principle there are various possibilities for providing effective wiring:


- Switching executed on the contact,
- switching executed on the consumer,
- combination of both circuits.

In principle, a protective measure should be implemented directly where the source of the malfunction occurs. The switching circuitry of the consumer must therefore be assumed as the switching circuitry of the contact.


4.6.5 Connection terminals for the potential-free contacts

The designs in this chapter refer to the electrical cable connections (connection No. 6 and No. 7). Observe all instructions before connecting the device. It will otherwise be damaged.

DANGER!	Missing connection with the protective conductor
	<p>The connection to the protective conductor must be ensured before an electrical connection is established with the circuit of the potential-free contact.</p> <p>Before pulling the mains plug, the voltage-free contact of the potential-free contact must be established.</p>

DANGER!	Mains voltage
	<p>When wiring the electric power supply line, it must be ensured that the doubled up or reinforced insulation between the electric circuits which are hazardous when touched and secondary circuits which can be touched always remains intact.</p>


When the insulation of the connecting cables is not designed for the nominal voltage $U_0/U = 300/500$ VAC and is not designed for the test voltage of at least 1500 VAC, then the conductors must be provided with additional insulation.

NOTE	Additional insulation
	<p>The additional insulation must be suitable for a test voltage of 1500 VAC. The thickness of the insulation must be at least 0.4 mm. e.g. insulation hose, model Typ BIS 85 (Bierther GmbH).</p>


The terminal bar X23: (Position 36) with the terminals No. 1,2,3,4,5 is used exclusively for the connection of the potential-free contacts.

The potential-free changeover contact with the connection terminals X23: 1, X23: 2, X23: 3 for transmitting the operating messages and alarms of the PURIFICATOR unit and the PID sensor, switches when a malfunction is present.

The potential-free normally open contact with the connection terminals X23: 4 and X23: 5 for the transmission of the limit value alarm for the residual oil content will switch when the set limit value is exceeded.

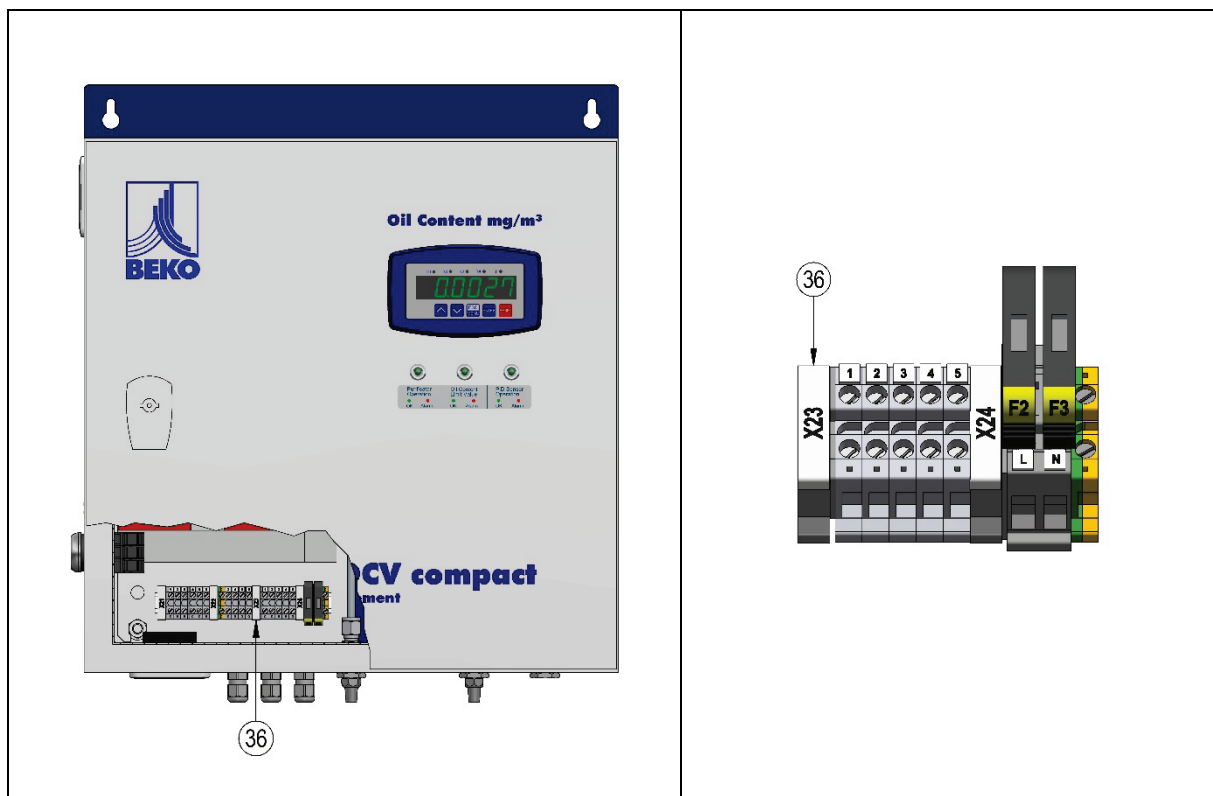

The additional insulation of the connection cables Position 37 for the potential-free contact can be implemented as follows:

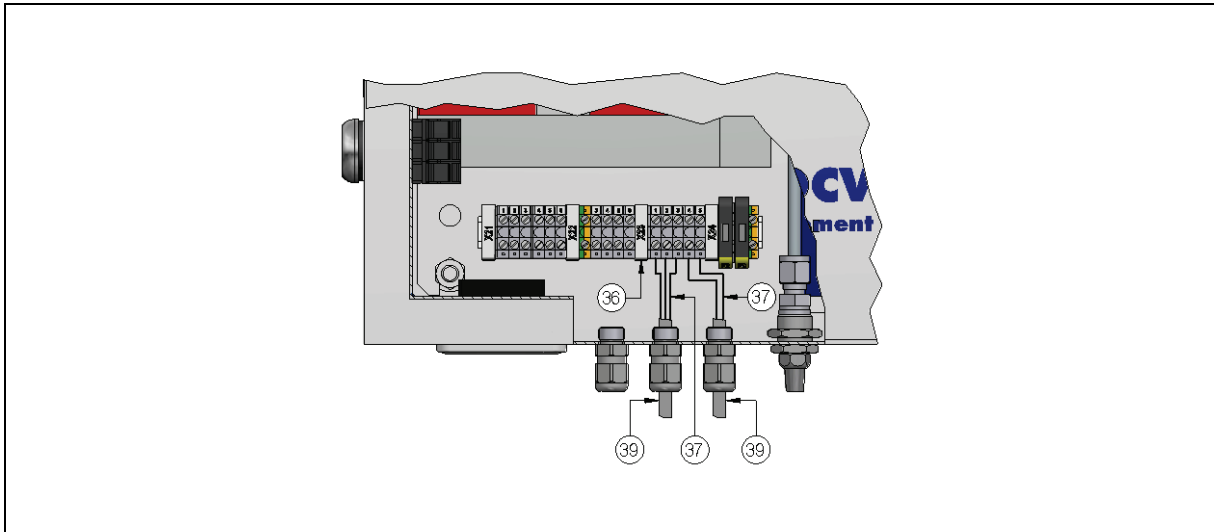


Potential-free changeover contact for forwarding the operating messages and alarms of the PURIFICATOR unit and the PID sensor.

Potential-free normally open contact for transferring the limit value alarm for the residual oil content.


Connection terminals X23: 1, X23: 2, X23: 3


Connection terminals X23: 4, X23: 5

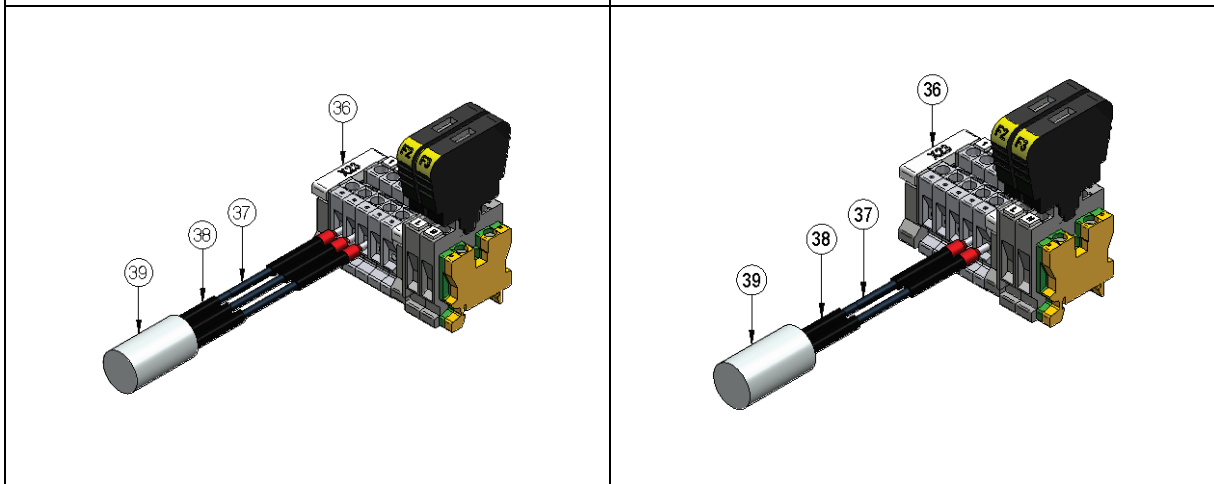



- Position 36 Connection terminals X23: 1, X23: 2, X23: 3 and X23: 4, X23: 5
- Position 37 Electrical conductor
- Position 38 Additional insulation for electrical conductors
- Position 39 Connection cable

5 Commissioning

CAUTION	Risks due to damaged components
	<p>Defective components can impair the functional safety, result in incorrect measurements and cause subsequent damage.</p> <ul style="list-style-type: none"> • <u>Never</u> operate with damaged components.

NOTE	Execute a temperature compensation
	<p>High ambient temperature fluctuations during transport, storage or installation, can cause damage to the device or impair its measuring accuracy.</p> <ul style="list-style-type: none"> • Ensure that the METPOINT® OCV compact has been unpacked and stored at the installation site for approx. 3 hours before the installation and temperature compensation with the environment has been possible. • During the acclimatisation time, do not connect the measuring device to the electric power supply. • The catalytic converter unit PURIFICATOR for the reference gas generation system requires a pre-heating time of approx. 0.5 hours. No compressed air must flow through the METPOINT®OCV compact until this time period has expired. • This process is particularly important where there are significant temperature difference between the transport/storage location and the operating environment.

5.1 Initial switching on

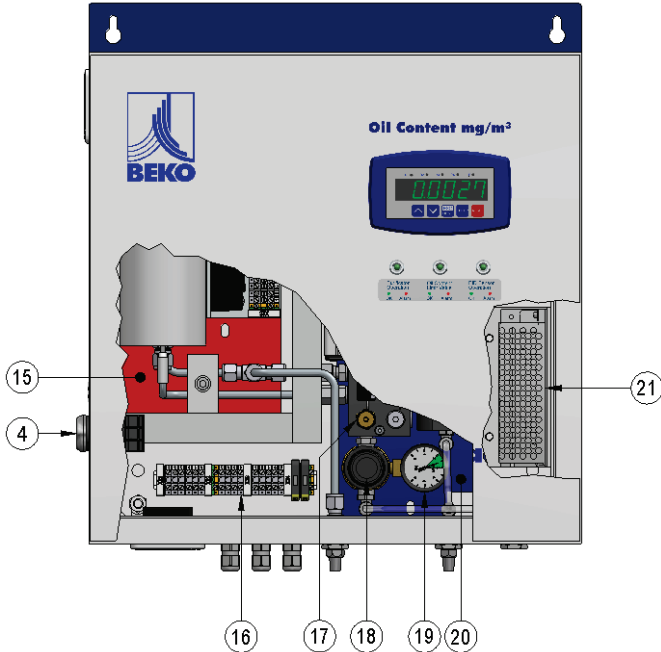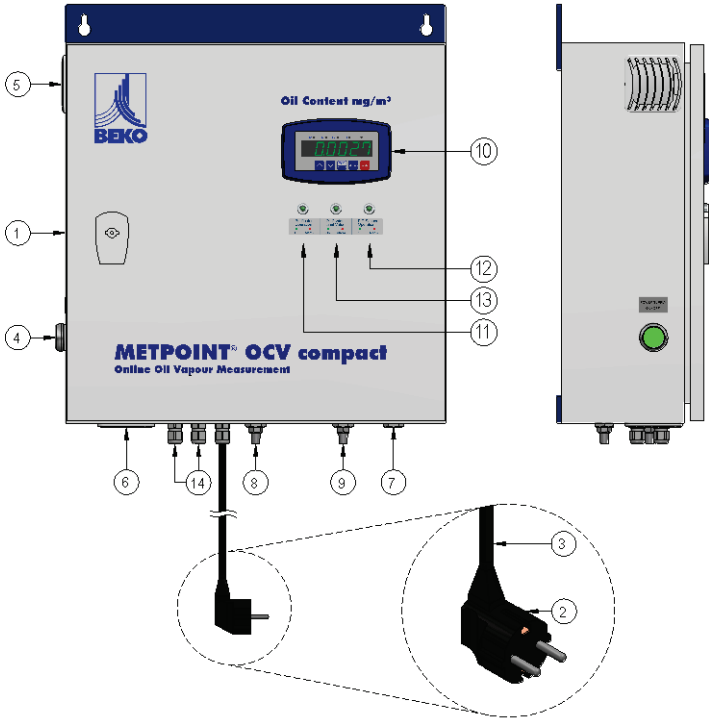

Description of the system components

- 2 Mains plug with protective contact
- 3 Electrical connection cable, 2.5 m long
- 4 Power switch for electrical power supply
- 10 Measured value display
- 11 LED-1 / operating message PURIFICATOR
- 12 LED-2 / operating message PID sensor
- 13 LED-3 / limit alarm for the residual oil content
- 14 Cable glands for customer electrical connections, 6 pieces M12x1.5
- 15 PURIFICATOR, catalytic converter unit for generating zero-air
- 18 Oil and grease-free pressure regulator
- 19 Pressure gauge for measuring gas operating pressure


After the installation is completed, proceed as follows for the commissioning of the measuring device:


1. Ensure that the temperature equilibrium of the measuring device is connected to the ambient conditions.
2. Inspect the compliance with the safety instructions for the ambient conditions. Refer to the chapter for "Assembly"
3. Inspect the compliance with the safety instructions relating to the quality of the compressed air. Refer to the chapter for "Assembly"
4. Inspect the compliance with the safety instructions relating to the quality of the connection components. Refer to the chapter for "Assembly"
5. Inspect the compliance with the safety instructions for the electrical connections and the voltage supply. Refer to the chapter for "Assembly"
6. Plug in the power plug (2).
7. Turn on the power switch (4).
8. The warm-up phase of the PURIFICATOR begins.

During the warm-up phase, an alarm signal sounds from the microprocessor-controlled temperature controller of the **PURIFICATOR** unit. This alarm is also indicated by a flashing of the display (inside the device).

The acoustic and optical alarm signals are only active outside the following temperature limits: Reactor temperature <+ 130°C and reactor temperature> + 240°C.

Temperature regulator of the PURIFICATOR unit

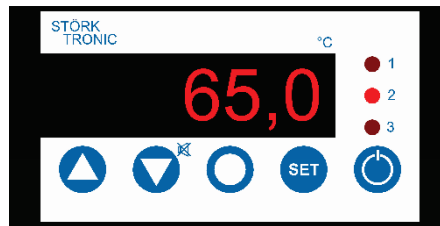



	Pressing the function button will deactivate the acoustic alarm.
---	--

The acoustic and optical alarm signals will be automatically deactivated when the minimum operating temperature of +130°C is achieved.


- The warm-up phase for the **PURIFICATOR** catalytic converter unit **of minimum 30 minutes** must be waited for. Two LEDs illuminate as orange in the catalytic converter warm-up phase. The PID sensor will not be perfused with compressed air in this time.

Both LEDs illuminate as orange = warm-up phase not completed.


 <p>Purificator Operation ● OK ● Alarm</p>	 <p>PID Sensor Operation ● OK ● Alarm</p>
---	---

The measurement value of **0.0000 mg/m³** will be indicated in the first 8 minutes of the warm-up phase of the **PURIFICATOR** catalytic converter unit. The measurement value for the concentration of hydrocarbons in the environment will be indicated for the remaining 22 minutes. The ambient air diffuses via the outlet muffler in the measuring chamber and generates a signal voltage which equates to the hydrocarbon concentration in the environment.

If the **PURIFICATOR** catalytic converter warm-up phase is completed, then these two LEDs illuminate as green.

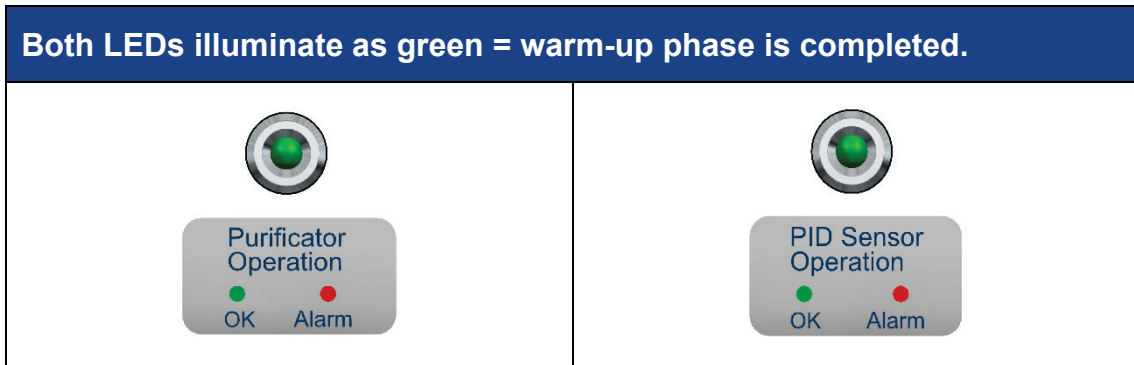


10. Open the connected compressed air supply – e.g. Ball valve Position H1 - and slowly pressurise the system.
11. Inspect the setting on the pressure regulator (18) of the oil vapour measuring device on the **METPOINT® OCV compact**. This pressure reducer is set as default to an operating pressure of **2.5 bar(g)**.

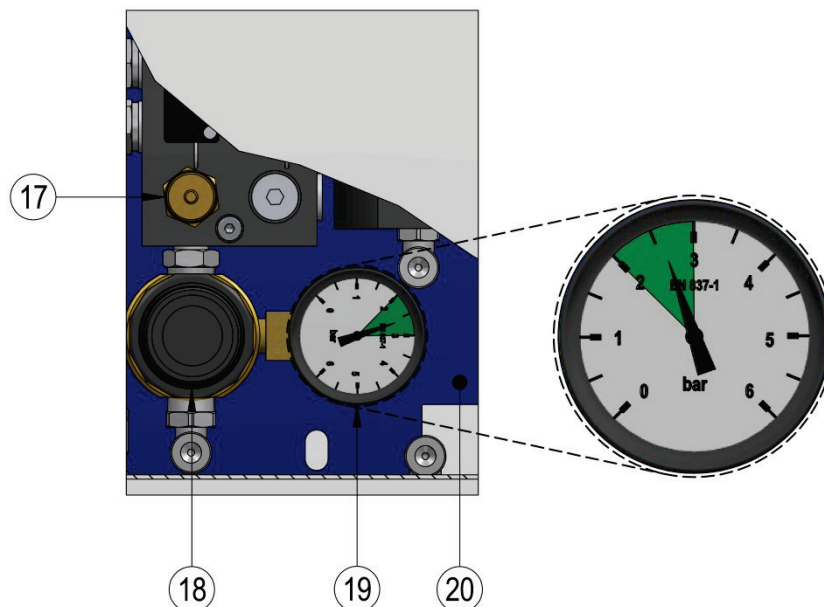

If it is necessary to change the setting of the pressure regulator, proceed as follows:

- Unlock the pressure regulator's adjustment head by pulling the hand wheel upwards.
- Release the line pressure by turning the hand wheel (18) anti-clockwise.
- Turning the hand wheel clockwise produces an increase in the initial pressure. Turning the hand wheel anti-clockwise generates a reduction in the output pressure.
- Control the pressure on the manometer of the pressure regulator.
- Lock the adjustment head of the pressure regulator by pressing the hand wheel downwards.

NOTE	Automatic calibration / Measurement values
	<p>The measuring value 0.0000 mg/m³ will be indicated in the first 8 minutes after switching on the measuring device.</p> <p>An automatic calibration for the zero point will be executed in this time. The first measurement value, which you can still amend, will be indicated after approx. 8 minutes.</p> <p>In the case of an initial commissioning, the measurement value will be initially stable after approx. 90 minutes when the device is located in thermal equilibrium.</p>





5.2 Setting the alarm limiting values for residual oil limit value

The **METPOINT® OCV compact** provides the possibility for customer-specific configuration of the alarm outputs. **The limit value for residual oil content can be freely set up to the maximum measurement value of 2.5 mg/m³.** Exceeding the set limiting value will be signalled by means of a red LED. In addition, there is the possibility to transfer the alarm status via the potential-free normally open contact. The connection is executed via the terminal bars **X23:4** and **X23:5**.

Oil Content mg/m³



Designation and functions of the display buttons

	<p>Function button [ESC / MENU]</p> <ul style="list-style-type: none"> • Opens the main menu (hold down for at least 2 seconds) • Exits the main menu • Cancels the amendment of a parameter in the menu
	<p>Function button [ENTER]</p> <ul style="list-style-type: none"> • Activates the parameter setting • Opens a sub-menu • Confirms the amendment of a parameter
	<p>Function button [▲] [▼]</p> <ul style="list-style-type: none"> • Selects a menu • Amends a selected parameter
	<p>Function button [RESET]</p> <ul style="list-style-type: none"> • Not activated



The marked default settings in the table must be amended when configuring a new alarm limit value.









It is essential for correct functionality that the “**bold**” marked parameters have the same entered values.





Menu	Parameter	Value range	Meaning	Default setting
Alarm contact / potential-free normally open contact				
<i>rEL1</i>	<i>modE</i>	On	Alarm contact is active	On
		Off	Alarm contact is inactive	
	<i>SEtP</i>	0.0000 to 2.5000	Alarm threshold in mg/m ³	0.5
Red LED oil content / visual alarm				
<i>rEL2</i>	<i>modE</i>	On	Signalling is active	On
		Off	Signalling is inactive	
	<i>SEtP</i>	0.0000 to 2.5000	Alarm threshold in mg/m ³	0.5
Green LED oil content / visual alarm				
<i>rEL3</i>	<i>modE</i>	In	Signalling is active	In
		Off	Signalling is inactive	
	<i>SEtP</i>	0.0000 to 2.5000	Below limit	0
	<i>SEt2</i>	<i>0.0000 to 2.5000</i>	Alarm threshold in mg/m ³	0.5





The setting for a new limit value for the residual oil content is illustrated here as exemplary.









The limit value alarm for the mean LED “Oil Content Limit Value” should be set to a limit value of **0.01 mg/m³**.






Current measurement value: < 0.01 mg/m³	Current measurement value: > 0.01 mg/m³
The green LED indicates that the set alarm limit for the residual oil content is not exceeded. The desired ISO class has been retained.	When the set limit value is exceeded, then the LED switches from GREEN to RED.
	

Settings for the potential-free normally open contact “rEL1”	
	Press the “ Menu ” button for at least 2 seconds.
	Press the right arrow button until “ rEL1 ” appears.
	Confirm by pressing the “ Enter ” button.
	Press the right arrow button until “ SEtP ” appears.
	Confirm by pressing the “ Enter ” button.
	Amend the parameters to the desired values by pressing the arrow buttons. One position can be respectively jumped forward by pressing the “ Enter ” button. Set the value 0.01.
	Confirm the amended parameters by pressing and holding down the “ Enter ” button. “ SEt? ” then appears in the display. Confirm the amendment by pressing the “ Enter ” button again.
	Exit the selected menu by pressing the “ Menu ” button.

Settings for the red “rEL2” LED	
	Press the “ Menu ” button for at least 2 seconds.
	Press the right arrow button until “ rEL2 ” appears.
	Confirm by pressing the “ Enter ” button.
	Press the right arrow button until “ SEtP ” appears.

	Confirm by pressing the “ Enter ” button.
	Amend the parameters to the desired values by pressing the arrow buttons. One position can be respectively jumped forward by pressing the “ Enter ” button. Set the value 0.01.
	Confirm the amended parameters by pressing and holding down the “ Enter ” button. “ SEt? ” then appears in the display. Confirm the amendment by pressing the “ Enter ” button again.
	Exit the selected menu by pressing the “ Menu ” button.

Settings for the green “rEL3” LED	
	Press the “ Menu ” button for at least 2 seconds.
	Press the right arrow button until “ rEL3 ” appears.
	Confirm by pressing the “ Enter ” button.
	Press the right arrow button until “ SEtP ” appears.
	Confirm by pressing the “ Enter ” button.
	Amend the parameters to the desired values by pressing the arrow buttons. One position can be respectively jumped forward by pressing the “ Enter ” button. Set the value 0.
	Confirm the amended parameters by pressing and holding down the “ Enter ” button. “ SEt? ” then appears in the display. Confirm the amendment by pressing the “ Enter ” button again.
	Exit the selected menu by pressing the “ Menu ” button.

	<p>Press the right arrow button until "SEtP2" appears.</p>
	<p>Confirm by pressing the "Enter" button.</p>
	<p>Amend the parameters to the desired values by pressing the arrow buttons. One position can be respectively jumped forward by pressing the "Enter" button. Set the value 0.01.</p>
	<p>Confirm the amended parameters by pressing and holding down the "Enter" button. "SEt?" then appears in the display. Confirm the amendment by pressing the "Enter" button again.</p>
	<p>Exit the selected menu by pressing the "Menu" button.</p>

5.3 Setting the analogue output for the residual oil measurement value

The **METPOINT® OCV compact** provides the possibility to transfer the current measurement value on via the 4 ... 20 mA analogue output. Transferring the 4 ... 20 mA signals is executed via the **terminal bars X22:3 and X22:4**.

The **METPOINT® OCV compact** is equipped with an **active current output** according to DIN IEC 60381-1. The internal signal converter issues proportional current to the measurement value. This is supplied by an independent internal voltage source accordingly. The maximum permissible ohmic load, also designated as burden, must be considered for this electrical connection with an active current output.

The maximum burden with **METPOINT® OCV compact** is **700 Ω**. **The measurement signal will be falsified with an overload of the current output with a too high burden. The active current output may only be connected with a passive current reducer.**














This means that the components for evaluation (e.g. A data logger) must not feed in voltage and/or any current into the measuring cable, rather only evaluate the active signal. The current source for driving the output signal is located within the **METPOINT® OCV compact**.






The current output functions according to the principle for current conveying live-zero (Deutscher Nullpunkt). This means that a current of 4 mA represents the live zero. Utilising this method means that a cable break or a defect in the analogue output can be identified by the evaluating component (data logger, PLC et al).

The represented parameter must be entered as this is important for the correct function.


Menu	Value range	Meaning	Default setting
Setting the analogue output			
<i>OutP</i>	On	Analogue output active	On
	Off	Analogue output inactive	
<i>Omod</i>	4-20	4-20 mA	4-20
<i>OUtL</i>	0.0000 to 2.5000	Lower analogue output limit in mg/m ³	0.0000
<i>OUtH</i>	0.0000 to 2.5000	Upper analogue output limit in mg/m ³	2.5000



The settings for the 4 ... 20 mA interface are illustrated as exemplary here.

	<p>Press the “Menu” button for at least 2 seconds.</p>
	<p>Press the right arrow button until “OutP” appears.</p>
	<p>Confirm by pressing the “Enter” button.</p>
	<p>Press the right arrow button until “Omod” appears.</p>
	<p>Confirm by pressing the “Enter” button.</p>
	<p>Press the right arrow button until “4 -20” appears</p>
	<p>Confirm by pressing the “Enter” button.</p>
	<p>Return to the previous menu by pressing the “Menu” button.</p>
	<p>Press the right arrow button until “OutL” appears</p>
	<p>Confirm by pressing the “Enter” button.</p>
	<p>Amend the parameters to the desired values by pressing the arrow buttons. One position can be respectively jumped forward with the “Enter” button.</p>
	<p>Confirm the amended parameters by pressing and holding down the “Enter” button. “SEt?” then appears in the display. Confirm the amendment by pressing the “Enter” button again.</p>
	<p>Exit the selected menu by pressing the “Menu” button.</p>

	<p>Press the right arrow button until "OUtH" appears</p>
	<p>Confirm by pressing the "Enter" button.</p>
	<p>Amend the parameters to the desired values by pressing the arrow buttons. One position can be respectively jumped forward with the "Enter" button.</p>
	<p>Confirm the amended parameters by pressing and holding down the "Enter" button. "SEt?" then appears in the display. Confirm the amendment by pressing the "Enter" button again.</p>
	<p>Exit the selected menu by pressing the "Menu" button.</p>

The following images document the settings for the 4 ... 20 mA analogue signals on the **METPOINT® BDL** data logger.

NOTE	Adhere to the operating instructions for the data logger.
	The illustrated settings hereby always refer to the latest valid operating instructions for the METPOINT® BDL / BDL compact data logger. The illustrations can vary from the current version.

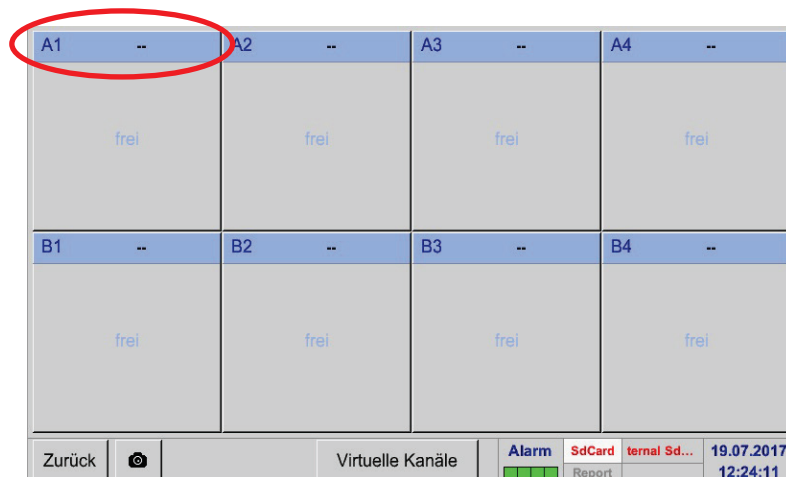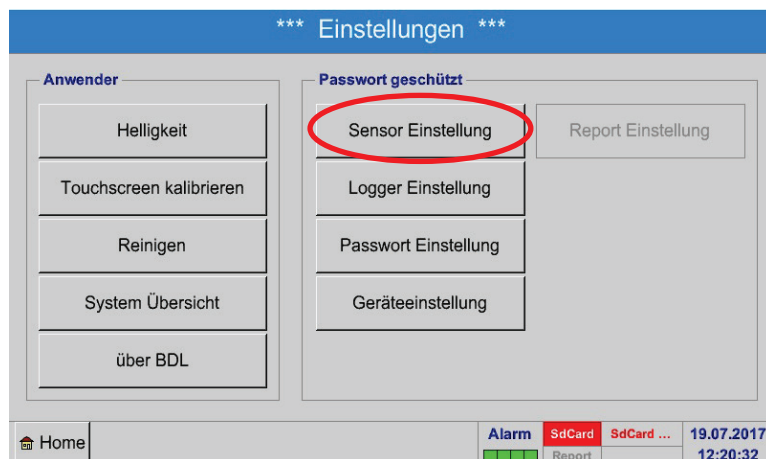

*** Kanal A1 *** ~ 0.0 V
~ 0 mA

Typ

Name

nicht konfiguriert

Zurück

Select Type of Hardware Channel


kein Sensor

0 - 1 V	0 - 10 V	0 - 30 V	0 - 20 mA
4 - 20 mA	PT100	PT1000	KTY81
Impuls	BEKO-Digital	Modbus	BEKO-PM710
PC400	BEKO-PM600	BEKO-PM600 US	FA450
kein Sensor			

Select Type of Hardware Channel

4 - 20 mA

0 - 1 V	0 - 10 V	0 - 30 V	0 - 20 mA
4 - 20 mA	PT100	PT1000	KTY81
Impuls	BEKO-Digital	Modbus	BEKO-PM710
PC400	BEKO-PM600	BEKO-PM600 US	FA450
kein Sensor			

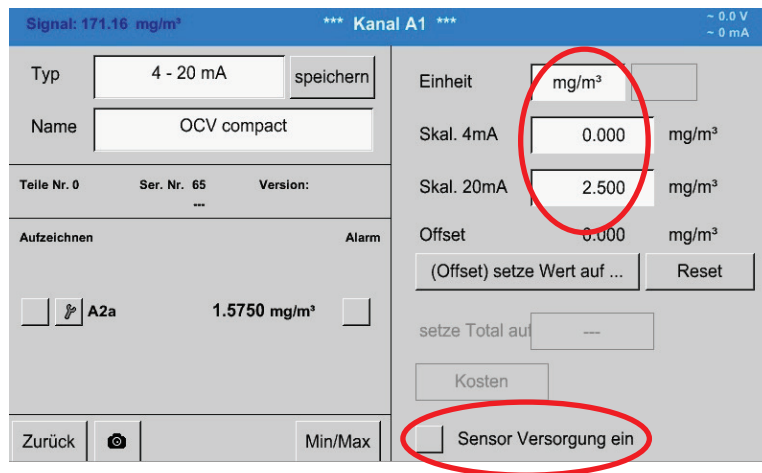

NOTE	Select correct setting
	The menu point for ”Sensor supply ON“ must not be activated.

5.4 Digital interface RS-485 MODBUS RTU

The standard design of the **METPOINT® OCV compact** with a display provides the possibility for transferring the current measurement value via the **MODBUS RTU Protocol**.

The connection for the RS-485 interface is executed via the terminal bars **X22:8 and X22:9**.

The following will define the important parameters and registers for the **MODBUS RTU (Remote Terminal Unit / Fernbedienungsterminal)** interface:

Transfer rate: Selectable from 1200 – 115200 Bits/Second

Transfer parameter: 1 Start Bit, 8 Data bits, 1 or 2 Stop Bits, no parity testing

MODBUS Register	Data type	Value
1	Unsigned Integer 32Bit	Current measurement value [mg/m ³] without decimal point
3	Unsigned Integer 16Bit	Position for the decimal point











The treatment and handling of floating point values/fixed point values will not be additionally defined and/or planned in the current MODBUS Standard (**MODBUS APPLICATION PROTOCOL SPECIFICATION V1.1b3**). The current measurement value will therefore be transferred according to the standard as **32 Bit Unsigned Integer**. The transfer will be executed by the MODBUS Standard accordingly as 2 words per 16 Bit (16 Bit WORD). The **MSW (Most Significant Word)** will be transferred first.

The number of decimal positions after the point can be additionally queried via the **Holding Register 3**. The standard feature delivers the query back from this register with OCV compact as the value "4". This means that the current measurement value will be represented with 4 positions after the decimal point (**0.0000**).


The following parameter must be entered as this is important for the correct function.



Menu	Value range	Meaning	Default setting
RS-485 MODBUS RTU settings			
Addr	1 to 255	Device address	1
bAud		Baud rate in Bits/Second	19200
mbAc	<i>On</i>	Configure approval Amendment active	oFF
	<i>oFF</i>	Configure approval Amendment inactive	
mbtO		MODBUS time out in s	
rESP	<i>Hour</i>	MODBUS delay standard	Hour

The settings for the MODBUS interface will be illustrated as exemplary here.

	<p>Press the “Menu” button for at least 2 seconds.</p>
	<p>Press the right arrow button until “rS” appears.</p>
	<p>Confirm by pressing the “Enter” button.</p>
	<p>Press the right arrow button until “Addr” appears.</p>
	<p>Confirm by pressing the “Enter” button.</p>
	<p>Amend the parameters to the desired values by pressing the arrow buttons. One position can be respectively jumped forward with the “Enter” button. Set the address.</p>
	<p>Confirm by pressing the “Enter” button.</p>
	<p>Return to the previous menu by pressing the “Menu” button.</p>
	<p>Repeat the steps for menu points “bAud”, “mbAc”, “mbtO” and “rESP”.</p>
	<p>Confirm the amended parameters by pressing and holding down the “Enter” button. “SEt?” then appears in the display. Confirm the amendment by pressing the “Enter” button again.</p>
	<p>Exit the selected menu by pressing the “Menu” button.</p>

The following images document the settings for the RS-485 interface on the **METPOINT® BDL** data logger.

NOTE	Adhere to the operating instructions for the data logger.
	The illustrated settings hereby always refer to the latest valid operating instructions for the METPOINT® BDL / BDL compact data logger. The illustrations can vary from the current version.

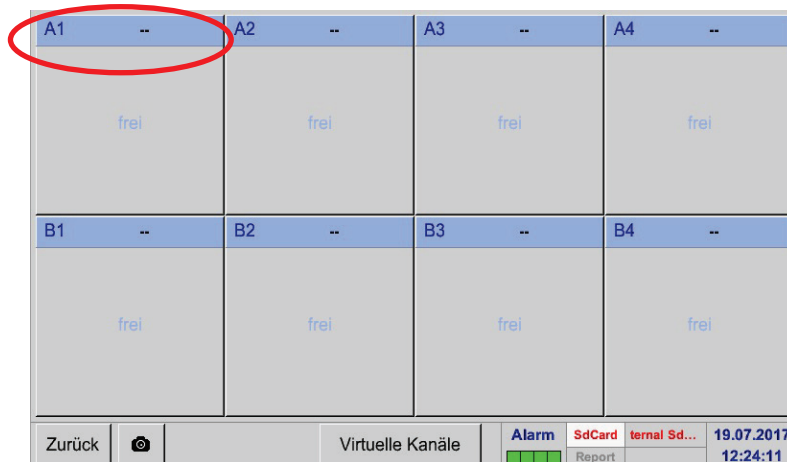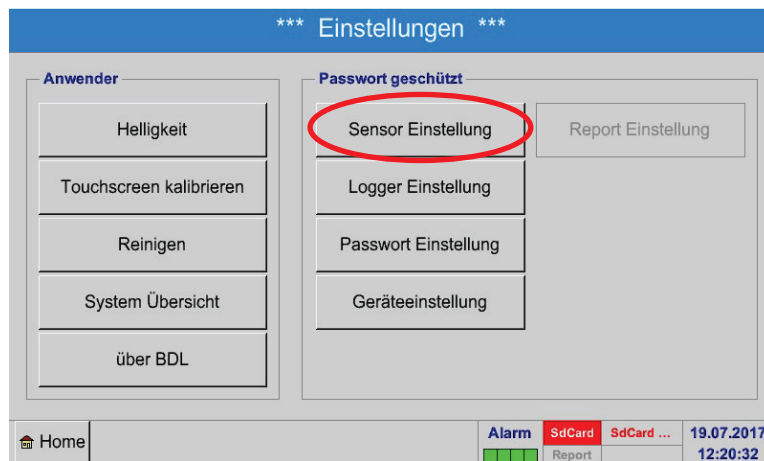

*** Kanal A1 *** ~ 0.0 V
~ 0 mA

Typ

Name

nicht konfiguriert

Zurück

Select Type of Hardware Channel

kein Sensor

0 - 1 V	0 - 10 V	0 - 30 V	0 - 20 mA
4 - 20 mA	PT100	PT1000	KTY81
Impuls	BEKO-Digital	Modbus	BEKO-PM710
PC400	BEKO-PM600	BEKO-PM600 US	FA450
kein Sensor			

Select Type of Hardware Channel

Modbus

0 - 1 V	0 - 10 V	0 - 30 V	0 - 20 mA
4 - 20 mA	PT100	PT1000	KTY81
Pulse	BEKO-Digital	Modbus	BEKO-PM710
PC400	BEKO-PM600	BEKO-PM600 US	FA450
No Sensor			

*** Kanal A1 *** ~ 0.0 V
~ 0 mA

Typ

Name

Telle Nr. 0 Ser. Nr. 65 Version: ...

Aufzeichnen Alarm

OK Abbruch Min/Max

Generischer Modbus

Id:1 B:19200 P:E S:1

Timeout:100 msec

Register Einstellungen

Va Vb Vc Vd Ve Vf Vg Vh

ModBus ID benutze

Reg.Adresse

Reg.Format

Einheit

Skal.

Sensor Versorgung ein

11/24 Channel Name

1	2	3	4	5	6	7	8	9	0
q	w	e	r	t	z	u	i	o	p
a	s	d	f	g	h	j	k	l	+
y	x	c	v	b	n	m	,	.	-
ABC	Abc	@#\$							

OK Abbruch

*** Kanal A1 *** ~ 0.0 V
~ 0 mA

Typ

Name

Telle Nr. 0 Ser. Nr. 65 Version: ...

Aufzeichnen Alarm

OK Abbruch Min/Max

Generischer Modbus

Id:1 B:19200 P:E S:1

Timeout:100 msec

Register Einstellungen

Va Vb Vc Vd Ve Vf Vg Vh

ModBus ID benutze

Reg.Adresse

Reg.Format

Einheit

Skal.

Sensor Versorgung ein

Modbus Einstellungen

Modbus ID:

Baudrate:

Stoppsbit: Term Bias

Parität: even odd

Antwortzeitlimit: msec HW-Version: 0.00

allow Modbus Extended Channels

*** Kanal A1 ***

~ 0.0 V
~ 0 mA

Typ:

Name:

Teile Nr. 0 Ser. Nr. 65 Version: ...

Aufzeichnen: A1a Alarm 11.29 mg/m³

Generischer Modbus

Id:1 B:19200 P:N S:1 Timeout:1000 msec

Register Einstellungen

ModBus ID: **benutze**

Reg.Adresse:

Reg.Format:

Einheit:

Skal.:

Sensor Versorgung ein

Datenformat

Registertyp

Datentyp

Byte Anordnung

*** Kanal A1 *** - 0.0 V
- 0 mA

Typ	Modbus	speichern
Name	OCV compact	
Teile Nr. 0	Ser. Nr. 65	Version: ...
Aufzeichnen	A1a	11.29 mg/m ³
OK		Abbruch Min/Max

Generischer Modbus

Id:1 B:19200 P:N S:1
Timeout:1000 msec

Modbus Einstellungen

Register Einstellungen

Va Vb Vc Vd Ve Vf Vg Vh

ModBus ID 1 benutze

Reg.Adresse 1

Reg.Format [HR] UI4

Einheit **mg/m³**

Skal. 0.0001

Sensor Versorgung ein

*** Kanal A1 *** - 0.0 V
- 0 mA

Typ	Modbus	speichern
Name	OCV compact	
Teile Nr. 0	Ser. Nr. 65	Version: ...
Aufzeichnen	A1a	11.29 mg/m ³
OK		Abbruch Min/Max

Generischer Modbus

Id:1 B:19200 P:N S:1
Timeout:1000 msec

Modbus Einstellungen

Register Einstellungen

Va Vb Vc Vd Ve Vf Vg Vh

ModBus ID 1 benutze

Reg.Adresse 1

Reg.Format [HR] UI4

Einheit mg/m³

Skal. **0.0001**

Sensor Versorgung ein

*** Kanal A1 *** - 0.0 V
- 0 mA

Typ	Modbus	speichern
Name	OCV compact	
Teile Nr. 0	Ser. Nr. 65	Version: ...
Aufzeichnen	A1a	11.29 mg/m ³
OK		Abbruch Min/Max

Generischer Modbus

Id:1 B:19200 P:N S:1
Timeout:1000 msec

Modbus Einstellungen

Register Einstellungen

Va Vb Vc Vd Ve Vf Vg Vh

ModBus ID 1 benutze

Reg.Adresse 1

Reg.Format [HR] UI4


Einheit mg/m³

Skal. 0.0001


Sensor Versorgung ein

6 Troubleshooting and remedying malfunctions

6.1 Measures in emergencies

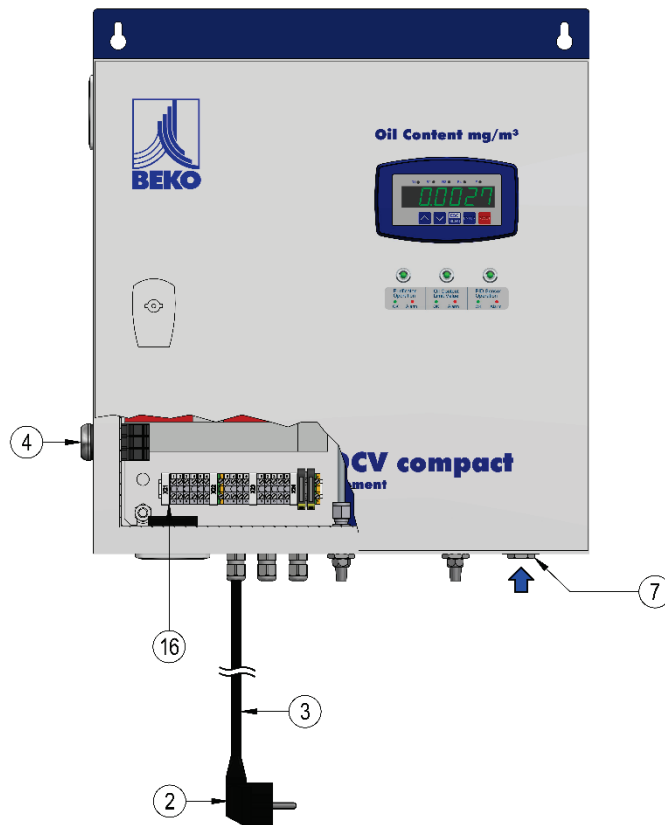





In case of emergency, switch off the **METPOINT® OCV compact** via the mains power switch for electrical power supply (4) and unplug the power supply plug (2).

WARNING!	Fighting fires
	<p>Never utilise water for fighting fires on or close to the METPOINT® OCV compact.</p>

6.2 Operating messages


The operating statuses of the individual components are permanently monitored and signalled by means of LEDs. A potential-free changeover contact provides the possibility of forwarding the operating messages.






Operating message PURIFICATOR	Operating message PID sensor
<p>A green LED indicates the malfunction-free operation of the catalytic converter unit for the generation of zero-air, the so-called PURIFICATOR.</p>	<p>A green LED indicates the interference-free operation of the PID sensor.</p>
	
<p>In the event of a malfunction of the PURIFICATOR, the LED switches from GREEN to RED.</p>	<p>In case of a PID sensor operational malfunction, the LED switches from GREEN to RED.</p>
	
<p>If a deviation from the defined parameters is detected in the monitoring software, then the programme switches over to safe operation and switches off the compressed air supply to the PID sensor. The alarm status will be signalled by the red LED of the corresponding LED and a potential-free changeover contact switches.</p>	

The following operating statuses will be monitored and issued as a malfunction:

- Operating pressure in the system
- Measuring gas through flow rate
- Operating temperature for the catalytic converter unit
- Measuring gas temperature in the sensor chamber
- Measuring gas pressure in the measuring chamber
- EPCB temperature
- UV lamp failure
- Measuring range
- Exceeding the maintenance interval

Malfunction image	
	
Cause	Measure
<p>Operating temperature for the catalytic converter unit is too low.</p> <p>Operating temperature of the catalytic converter unit is too high as a result of a too high oil content.</p> <p>Temperature regulating settings have been amended.</p> <p>Compressed air humidity is too high.</p>	<p>Inspect measuring gas flow-through.</p> <p>Inspect operating pressure.</p> <p>Inspect pressure regulator setting on compressed air INLET.</p> <p>Inspect pressure dew point.</p>

Malfunction image	
	
Cause	Measure
<p>UV lamp is defect.</p> <p>Measuring gas temperature is too high.</p> <p>Oil content in the compressed air is too high.</p> <p>EPCB temperature is too high.</p> <p>Measuring gas pressure in the PID measuring chamber is too high.</p> <p>Operating pressure on compressed air INLET too low.</p>	<p>Inspect measuring gas flow-through.</p> <p>Inspect operating pressure.</p> <p>Inspect pressure regulator setting on compressed air INLET.</p> <p>Exchange UV lamp.</p> <p>Inspect compressed air supply.</p>

Malfunction image: Red flashing of both these LEDs	
	
Cause	Measure
<p>Maintenance interval (8,760 operating hours) was exceeded.</p>	<p>Execute maintenance and recalibration.</p>

6.2.1 Exceeding the set alarm limit value


If the customer's set alarm limit value for residual oil content is exceeded, then an acoustic signal will be issued. The signal can be deactivated by pressing any preferred button on the measuring value display.

Oil Content mg/m³



6.2.2 Exceeding and undershooting the PURIFICATOR temperature

If the **PURIFICATOR** temperature is located outside the following temperature limits: < +130°C and > +240°C, then an alarm signal from the microprocessor-controlled temperature regulator will be issued. This alarm will also be indicated by flashing display.

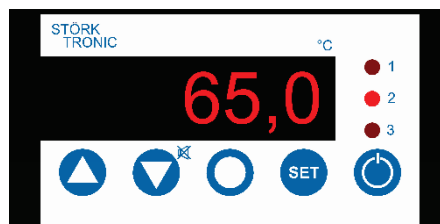


Pressing the function button will deactivate the acoustic alarm.


7 Maintenance and repair works

The owner or operator of the **METPOINT® OCV compact** must ensure that the measuring device is inspected in a satisfactory manner, regularly monitored and repaired.

All servicing, maintenance and repair works may only be executed by specially trained, skilled personnel and/or professional qualified companies.

DANGER!	Electric power
	<p>Touchable conductive parts can lead to dangerous voltages / mains voltage during installation and maintenance or in case of defects. Hazard resulting in of serious or even fatal injury from electric shock when coming into contact with uninsulated parts or mains voltage.</p> <ul style="list-style-type: none"> • All works on the electrical parts of the measuring system may only be executed by appropriately trained skilled personnel. • The measuring device must not be operated when the power supply cables indicate damage or the housing parts have been damaged or removed. • The local valid legal regulations and provisions must be complied with without exception. • Observe the electrical data provided on the rating plate. • Work on the electrical connections may only be executed when the power supply is switched off. The device must be protected against unintentional reconnection or switching on again. • Only utilise components for the electrical installation which have a current approval and are labelled with a CE-Identification Marking. • The wire ends to be connected to the control unit must be equipped with wire-end ferrules. • All electrical connections must be inspected before commissioning and at regular intervals.


- **Maintenance and repair works must be executed in such a way that:**
- Accidents for people are prevented
- Damage to quality is prevented
- The components of the measuring system remain in a good operating condition
- The intended use and utilisation capability of the system remain unaffected.

CAUTION	Error functions on the METPOINT® OCV compact
	<p>Incorrect installation and insufficient maintenance can lead to malfunctions on the measuring device which will impair the display functions and could lead to incorrect interpretation.</p> <p>Observe the applicable national regulations, provisions and safety regulations during installation and operation.</p>

7.1 Advance and subsequent preparation for maintenance works

- **Disconnect the device from the power supply. Unplug the power cable to disconnect the device.**
- **Secure the device against unintentional reconnection.**
- **Prepare the ESD protection as described below.**

7.1.1 Prevention of electrostatic discharge (ESD)

DANGER!	Damage is possible due to electrostatic discharge ESD
	<p>The measuring device contains electronic components that might be destroyed by electrostatic discharge (ESD). Contact with people or objects that are electrically charged endangers these components. In the worst case, components sensitive to ESD might be instantly destroyed when touched or fail after start-up.</p> <p>In order to minimise or prevent possible damage from sudden electrostatic discharge, observe the requirements of EN 61340-5-1. Always therefore ensure that you do not touch electronic components while they are connected to voltage or power supplies.</p>

Basic safety precautions

In order not to cause damage when handling electronic devices, take the necessary precautions for the prevention of electrostatic charges as laid down in DIN EN 61340-5-1, IEC 63140-5, and DIN EN 100 015. These precautions prevent electronic discharge from being caused and the associated damage to your equipment.


Measures

As soon as the housing of the **METPOINT® OVC compact** is opened for maintenance or servicing, the following protective measures must be implemented and the corresponding safety resources must be utilised.

Utilise an earthed ESD mat

Wear a wrist strap

Discharge tools prior to use by rubbing them over the ESD mat

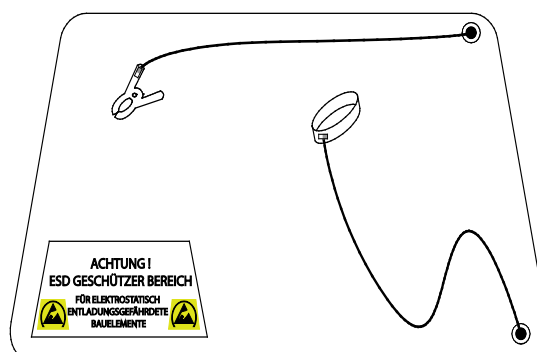

7.2 Retaining the protection class with a housing


The measuring instrument **METPOINT® OCV compact** fulfils the requirements of protection class **IP 54** according to EN 60529.

The protection class of a housing is defined by the IP mark and a two-digit code number. The first digit has two meanings (protection for people and operating material or resources), the second digit has only one meaning: Protection against water.

IP 54 according to EN 60529

IP International Protection

- 5 Dust-protected, dust deposits are permissible, but they may not endanger the function of the device with their quantity
- 4 Protected against splashing water, water which splashes from any direction against the housing must not have any harmful effect.

CAUTION	Risk of damage to device
	<p>After all assembly, service and maintenance works on the measuring instrument, the specified protection class has to be ensured again.</p>

When executing any types of work on the **METPOINT® OCV compact**, the following points must always be adhered to:

- Use only clean original seals Replace defective seals.
- The electrical connection cables used must not indicate any damaged. The cables must fulfil the requirements of relevant standards and regulations. Replace faulty cables immediately.
- Lay the cables in front of the measuring device as a loop to prevent water ingress into the housing.
- Tighten the cable gland openings tightly.
- Close unused cable glands with a blind plug.

The **METPOINT® OCV compact** measuring instrument fulfils the requirements of protection class **IK 08** according to **IEC 62 262** against external mechanical stresses.

7.3 Maintenance schedule

This submitted maintenance schedule is considered to be a recommendation from the manufacturer. The owner or operator must check the intervals depending on the operating conditions and, if necessary, shorten the intervals.

Activity	Weekly	Monthly	Annually
Inspect the pressure on the manometer of the pressure regulator	x		
Inspect the measuring system externally for soiling, damage and corrosion		x	
Record current operating parameters and compare them with the data in "Technical data"		x	
Inspect the safety equipment and devices			x
Inspect pipework connections and all bolt and screw connections and tighten as necessary			x
Inspect the terminals of the electrical installation and re-tighten if necessary			x
Execute a leak test on the system			x
Functional inspection of the electrical switching and control devices			x
Inspect fuses and replace if necessary			x
Inspect the function and wear of the solenoid valves			x
Inspect the function and condition of the compressed air regulator			x
Execute a function test for the operating messages			x
Inspect the functions of the catalytic converter unit PURIFICATOR			x
Inspect the electrical connection for damage		x	
Replace the UV lamp of the PID sensor			x
Carry out the cleaning of the PID sensor chamber			x
Inspect sensor sensitivity			x
Calibrate / adjust the PID sensor			x

7.4 Calibration intervals

The user is solely responsible for setting the calibration intervals.

If specifications are provided for recalibration, e.g. in the quality management manual, then these are the binding source for recalibration periods.

If the QM system does not contain any specifications concerning the calibration periods, then the decision must be taken from weighing up how much the costs are for a more frequent recalibration on the one hand and, on the other hand, for possible invalid results.

For certain measurement conditions such as e.g. high operating hours (shift operation), extreme temperature conditions, continuous alternating current operation, dirt and moisture, a more frequent calibration is required.


The importance of the operating conditions will also mean that recalibration must always be implemented when the **METPOINT® OCV compact** is exposed to loads and stresses which exceed the intended use. This can range from increased overload or falling down, extreme temperature conditions, high humidity levels of the compressed air up to, and including, accessing the device for repair purposes.

In the case of very high demands on the accuracy of the measurement, we recommend to provide an interval for recalibration of 6 months. If, after the first or second recalibration, the measurement properties remain stable, then the calibration interval can be extended to 12 months. A corresponding method for the adaptation (extension or shortening) of the calibration intervals should be part of the QM system.

A recalibration must be executed 12 months after delivery of the METPOINT® OCV compact at the latest.


The LEDs installed below the display:

"Purificator Operation" and "PID Sensor Operation" indicate to the user that a maintenance / calibration of the measuring device is necessary. The two LEDs flash as red every 24 seconds for 4 seconds (flashing frequency of 200 ms) after 8,760 hours of operation.

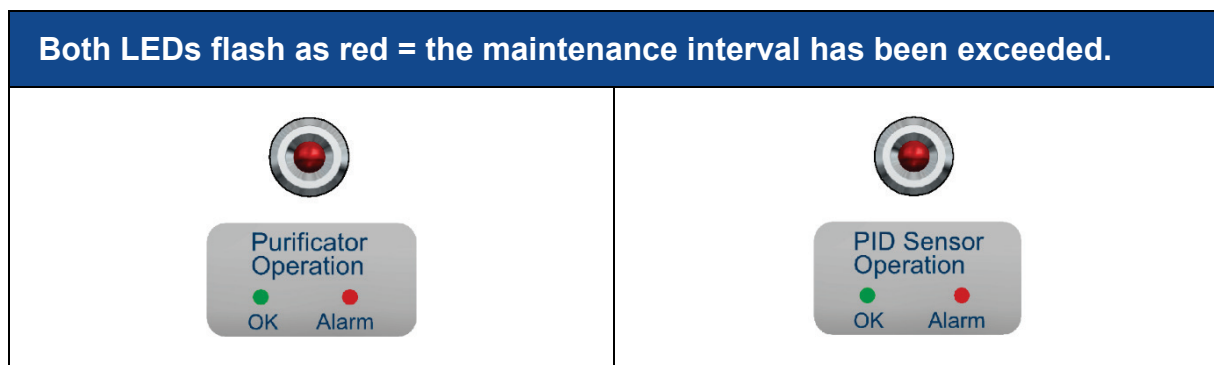

7.5 Inspect the pressure regulator for the compressed air inlet

There is a pressure reducer (18) for the compressed air located inside the housing of the **METPOINT® OCV compact**. This pressure reducer is used to regulate the pressure of the measurement gas and is set at an operating pressure of approx. 2.5 bar(g) as default.

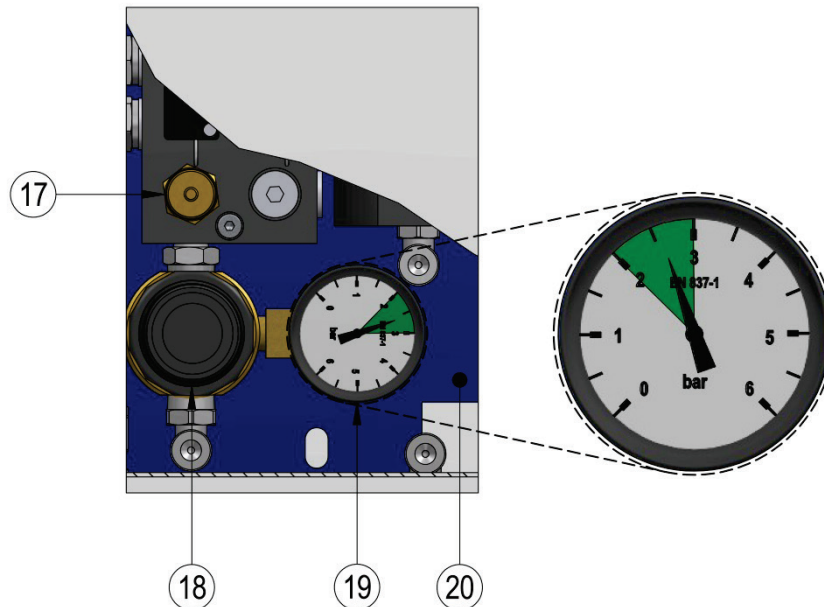

- 17 Safety valve for the measuring gas components
- 18 Oil and grease-free pressure regulator
- 19 Pressure gauge for measuring gas operating pressure
- 20 Sensor module including solenoid valves, pressure switch, PID sensor and pressure regulator

If it is necessary to change the setting of the pressure regulator, proceed as follows:


- Unlock the pressure regulator's adjustment head by pulling the hand wheel upwards.
- Release the line pressure by turning the hand wheel (18) anti-clockwise.
- Turning the hand wheel clockwise produces an increase in the initial pressure. Turning the hand wheel anti-clockwise generates a reduction in the output pressure.
- Control the pressure on the manometer of the pressure regulator.
- Lock the adjustment head of the pressure regulator by pressing the hand wheel downwards.

7.6 Electrical connection cable defective

When the mains power supply cable is damaged, then the system must be immediately shut down. It may only be put into operation again after the mains cable has been replaced.

Replace a damaged power cable immediately.

Only replace a damaged mains power cable with an equivalent cable.

NOTE	Mains voltage
	The required supply voltage is: 100-240 VAC / 1Ph. / PE / 50-60 Hz / ± 10%


Technical specification of the electrical connection cable supplied with the measuring instrument:

Mains cable feed	
Power cable:	3 x 0.75 mm ² with protective contact plug and PE protection earthing
Plug connector:	Two pin plug connector with safety contact
Nominal voltage plug	250 V
Nominal current plug	16 A,
Standard plug connector:	Production guideline CEE 7 Standard sheet VII, VDE 0620
Cable length and type	2.5 m, cable type H05VV-F 3G0.75□ Connection cable according to harmonised documents: HD21.5, HD21.12 (VDE 0281-5, VDE 0281-12)

The cable is compliant with (EC) Ordinance No. 1907/2006 (REACH) and EC Directive 2011/65/EC (RoHS) as well as the EC Low Voltage Directive 2014/35 / EU.

7.7 Replacing the fuses


The device is fused on the primary side with two fuses of **2.5 A load**. These are located in the fuse holders of terminals **X24: L** and **X24: N**.

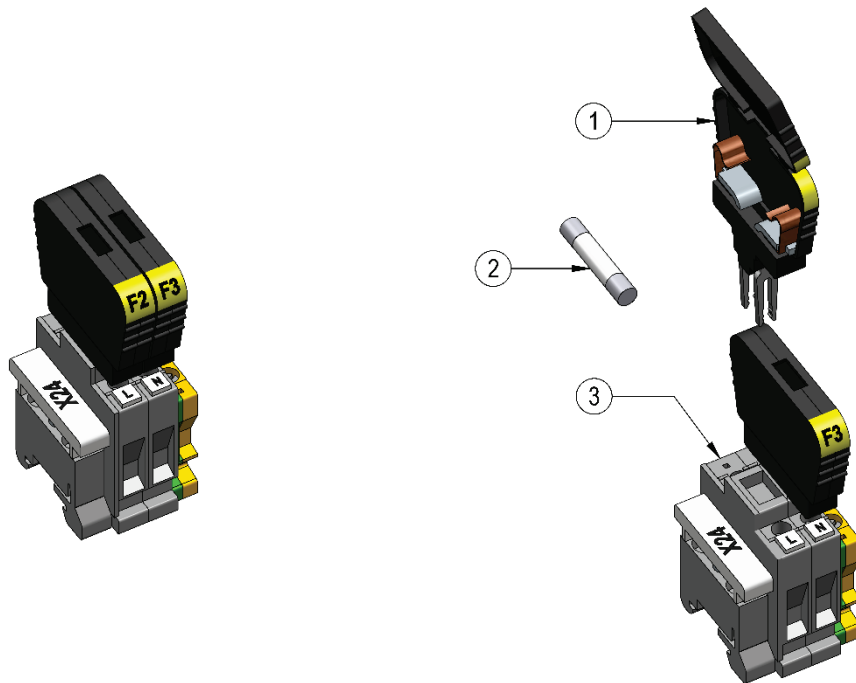

- 1 Fuse holder
- 2 Fuse unit
- 3 Fuse terminal

Internal device security	
Fuse unit:	5 x 20 mm
Diameter:	Ø 5 mm
Length:	20 mm
Structure:	Ceramic pipe with extinguisher
Contact caps:	Brass nickel-plated
Type:	T2, 5AH
Voltage:	250 V AC
Shut down characteristics:	Sluggish
Rated current:	2.5 A
Switching capacity	1500 A (H)
Fuse unit:	EN 60127-2-5

The device is protected on the secondary side with a **1.5 A medium-time** fuse. This is located in a fuse holder on the control board and is marked with **F1**.

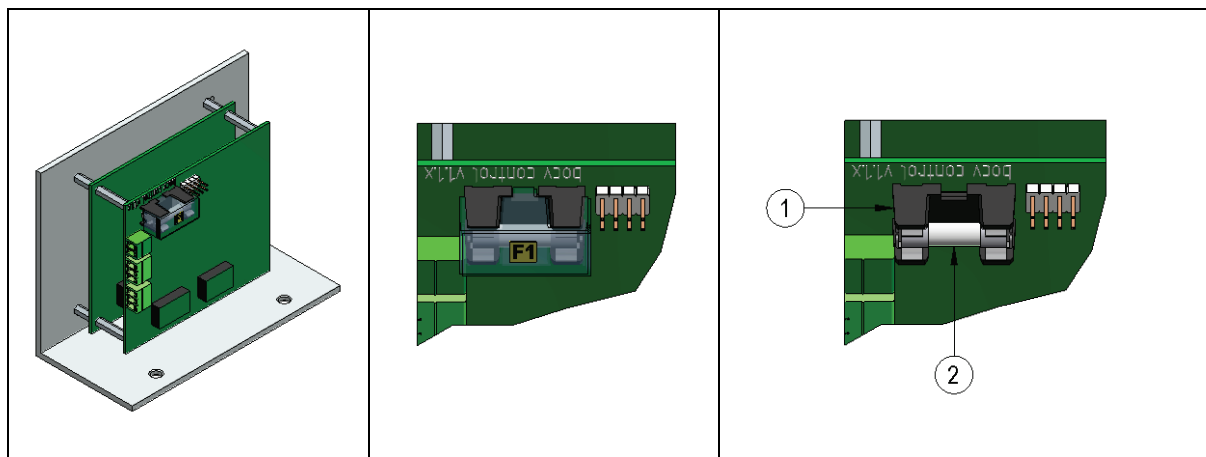


- 1 Fuse holder
- 2 Fuse unit

Internal device security	
Fuse unit:	5 x 20 mm
Diameter:	Ø 5 mm
Length:	20 mm
Structure:	Glass tube, transparent
Contact caps:	Brass nickel-plated
Type:	T1, 5AM
Voltage:	250 V AC
Shut down characteristics:	Medium-time
Rated current:	1.5 A
Switching capacity	100 A
Fuse unit:	UL/CSA 248-14

7.8 Cleaning and decontamination

Cleaning the **METPOINT® OCV compact** will be executed with a slightly damp (not wet) cotton cloth or disposable wipe as well as mild, conventional cleaning agents/soap.

To decontaminate the device, spray the cleaning agent on a clean cotton cloth or disposable wipe and thoroughly wipe the device. Dry the device subsequently with a clean cloth or let it dry at room temperature. Observe the locally applicable hygiene regulations.

CAUTION	Risk of damage to device
	Excessive humidity, the use of hard and pointed objects and aggressive cleaning agents can cause damage to the measuring system and the integrated electronic components. Observe the applicable national regulations, provisions and safety regulations during installation and operation.

Measures

- Never clean dripping wet
- Do not use aggressive cleaning agents
- Do not clean the device with hard or pointed objects

7.9 List of spare parts

Replacement of spare parts may only be executed by **BEKO TECHNOLOGIES GmbH** or by a specialist company authorised by **BEKO**.

Product number	Description
4040007	<p>Module: PURIFICATOR Catalytic converter unit for generating zero-air. Completely assembled and programmed.</p>
4040008	<p>Module: Measurement gas block Including: Solenoid valve, pressure vessel, PID sensor with measuring chamber, sensor board with AD converter, new UV lamp, new characteristic curve, pressure regulator with manometer. Completely assembled for connection and programmed, 10 point calibration with calibration log.</p>
4040006	<p>Muffler, material: Brass nickel-plated, Connection: G1/8" external thread.</p>

8 Decommissioning and Disposal

8.1 Decommissioning

Disconnect all electrical components of the **METPOINT® OCV compact**.

Turn off the power switch (Position 4).

Unplug the power cord.

Close the compressed air supply.

Close the shut-off ball valve item H1.


8.2 Disposal

Disposal of the device according to the WEEE Directive (Waste Electrical and Electronic Equipment)

Electrical and electronic components (WEE) must not be disposed as normal household waste in municipal rubbish bins. To dispose of the product, dismantle it. Materials such as glass, plastics and some chemical compounds are, recoverable, reusable, or recyclable.

According to Clause 5, Section 1 of the German Electrical and Electronic Equipment Act (ElektroG), **METPOINT OCV compact** is classified in Category 9 and not subject to any restrictions regarding hazardous substances. According to Clause 9, Sentence 7 (ElektroG), the **METPOINT® OCV compact** is will be taken back by **BEKO TECHNOLOGIES GmbH** for disposal.

If the **METPOINT® OCV compact** is not returned to **BEKO TECHNOLOGIES GmbH** for disposal, then **waste disposal key 20 01 36** will apply for used electrical and electronic equipment other than those mentioned in 20 01 21, 20 01 23 and 20 01 35.

WARNING!	Risk to health and the environment!
	<p>Never dispose of old devices as normal household waste!</p> <p>Depending on the medium utilised in the system, residues in the system could cause a hazard for the health of the operator and the environment. Always therefore implement suitable protective measures and dispose of the system through the proper channels accordingly.</p>

Measures:

Dismantled components must be immediately freed of measuring material residues when suitable measures have not been implemented previously.

9 EU Declaration of Conformity

BEKO TECHNOLOGIES GMBH
Im Taubental 7
41468 Neuss, GERMANY
Tel: +49 2131 988-0
www.beko-technologies.com



EU-Konformitätserklärung

Wir erklären hiermit, dass die nachfolgend bezeichneten Produkte den Anforderungen der einschlägigen Richtlinien und technischen Normen entsprechen. Diese Erklärung bezieht sich nur auf die Produkte in dem Zustand, in dem sie von uns in Verkehr gebracht wurden. Nicht vom Hersteller angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt.

Produktbezeichnung:	METPOINT® OCV compact
Typ:	4039709
Spannungsversorgung:	100 ... 240 VAC / 1 Ph. / PE / 50-60 Hz
Schutzart:	IP 54
Betriebstemperatur:	+5 ... +50°C
Betriebsdruckbereich:	3 ... 16 bar(g)
Datenblatt:	DB_OCVc-0817-FP-A
Produktbeschreibung und Funktion:	Messgerät zur Restöl-Überwachung in Druckluft

Druckgeräte-Richtlinie 2014/68/EG

Die Produkte fallen in keine Druckgerätekategorie und sind gemäß Artikel 4 Absatz 3 in Übereinstimmung mit der in den Mitgliedstaaten geltenden guten Ingenieurspraxis ausgelegt und werden dieser entsprechend hergestellt.

Niederspannungs-Richtlinie 2014/35/EU

Angewandte harmonisierte Normen: EN 61010-1:2010

EMV-Richtlinie 2014/30/EU

Angewandte harmonisierte Normen: EN 61326-1:2013, EN 61326-2-3:2013,

ROHS II-Richtlinie 2011/65/EU

Die Vorschriften der Richtlinie 2011/65/EU zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten werden erfüllt.

Die Produkte sind mit dem abgebildeten Zeichen gekennzeichnet:



Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller.

Neuss, 31.08.2017

Unterzeichnet für und im Namen von:

BEKO TECHNOLOGIES GMBH


i.V. Christian Riedel

Leiter Qualitätsmanagement International

EU-Decl_OCVc-A-DE_08.17

BEKO TECHNOLOGIES GMBH
Im Taubental 7
41468 Neuss, GERMANY
Phone: +49 2131 988-0
www.beko-technologies.com



EU Declaration of Conformity

We hereby declare that the products named below comply with the stipulations of the relevant directives and technical standards. This declaration only refers to products in the condition in which they have been placed into circulation. Parts which have not been installed by the manufacturer and/or modifications which have been implemented subsequently remain unconsidered.

Product designation:	METPOINT® OCV compact
Type:	4039709
Power supply:	100 ... 240 VAC / 1 Ph. / PE / 50-60 Hz
Protection category:	IP 54
Operating temperature	+5 ... +50°C
Operating pressure range:	3 ... 16 bar(g)
Data sheet:	DB_OCVc-0817-FP-A
Product description and function:	Measuring system for residual oil monitoring

Pressure Equipment Directive 2014/68/EC

The products are not classified in any pressure equipment category. In accordance to article 4, section 3, they have been designed and manufactured according to sound engineering practice as applicable in the EU member states.

Low Voltage Directive 2014/35/EU

Applied harmonised standards: EN 61010-1:2010

EMC Directive 2014/30/EU

Applied harmonised standards: EN 61326-1:2013, EN 61326-2-3:2013,

RoHS II Directive 2011/65/EU

The products meet the requirements laid down in European Directive 2011/65/EU concerning the restriction of the use of certain hazardous substances in electrical and electronic devices.

The products bear the CE Mark:



This Declaration of Conformity has been issued by the manufacturer.

Neuss, 31/08/2017

Signed on behalf of:
BEKO TECHNOLOGIES GMBH

i.V. Christian Riedel
Head of International Quality Management

EU-Decl_OCVc-A-DE_08.17_EN.docx

10 Service addresses

BEKO TECHNOLOGIES GmbH

Im Taubental 7
D - 41468 Neuss
Tel. +49 2131 988 0
Fax +49 2131 988 900
info@beko-technologies.com

DE

BEKO TECHNOLOGIES LTD.

Unit 11-12 Moons Park
Burnt Meadow Road
North Moons Moat
Redditch, Worcs, B98 9PA
Tel. +44 1527 575 778
info@beko-technologies.co.uk

GB

BEKO TECHNOLOGIES S.à.r.l.

Zone Industrielle
1 Rue des Frères Rémy
F - 57200 Sarreguemines
Tél. +33 387 283 800
info@beko-technologies.fr

FR

BEKO TECHNOLOGIES B.V.

Veenen 12
NL - 4703 RB Roosendaal
Tel. +31 165 320 300
benelux@beko-technologies.com

NL

BEKO TECHNOLOGIES (Shanghai) Co. Ltd.

Rm. 606 Tomson Commercial Building
710 Dongfang Rd.
Pudong Shanghai China
P.C. 200122
Tel. +86 21 508 158 85
info.cn@beko-technologies.cn

CN

BEKO TECHNOLOGIES s.r.o.

Na Pankraci 58
CZ - 140 00 Praha 4
Tel. +420 24 14 14 717 /
+420 24 14 09 333
info@beko-technologies.cz

CZ

BEKO Tecnológica España S.L.

Torruella i Urpina 37-42, nave 6
E - 08758 Cervelló
Tel. +34 93 632 76 68
Mobil +34 610 780 639
info.es@beko-technologies.es

ES

BEKO TECHNOLOGIES LIMITED

Unit 1010 Miramar Tower
132 Nathan Rd.
Tsim Sha Tsui Kowloon Hong Kong
Tel. +852 5578 6681 (Hong Kong)
+86 147 1537 0081 (China)
tim.chan@beko-technologies.com

HK

BEKO TECHNOLOGIES INDIA Pvt. Ltd.

Plot No.43/1 CIEEP Gandhi Nagar
Balanagar Hyderabad
IN - 500 037
Tel. +91 40 23080275 /
+91 40 23081107
Madhusudan.Masur@bekoindia.com

IN

BEKO TECHNOLOGIES S.r.l

Via Peano 86/88
I - 10040 Leini (TO)
Tel. +39 011 4500 576
Fax +39 0114 500 578
info.it@beko-technologies.com

IT

BEKO TECHNOLOGIES K.K

KEIHIN THINK Building 8 Floor
1-1 Minamiatarida-machi
Kawasaki-ku, Kawasaki-shi
JP - 210-0855
Tel. +81 44 328 76 01
info@beko-technologies.jp

JP

BEKO TECHNOLOGIES Sp. z o.o.

ul. Pańska 73
PL - 00-834 Warszawa
Tel. +48 22 314 75 40
info.pl@beko-technologies.pl

PL

BEKO TECHNOLOGIES S.E.Asia (Thailand) Ltd.

75/323 Soi Romklao, Romklao Road
Sansab Minburi
Bangkok 10510
Tel. +66 2-918-2477
info.th@beko-technologies.com

TH

BEKO TECHNOLOGIES CORP.

900 Great Southwest Pkwy SW
US - Atlanta, GA 30336
Tel. +1 404 924-6900
Fax +1 (404) 629-6666
beko@bekousa.com

US